



USER INSTRUCTIONS

Anchor Darling 1888-lb. Double-Disc Gate Valve

1/2" through 2" Valves with 10" Manual Tee Handles

FCD ADENIM0001-00

*Installation
Operation
Maintenance*



Table of Contents

1.0	Physical Description and Operation of Equipment	8.0	Periodic In-Service Testing Recommendations and Procedures
2.0	Design Conditions	9.0	Maintenance Instructions
3.0	Operating Conditions	10.0	Storage Requirements
4.0	Test Conditions	11.0	Bolting Torque Values
5.0	Operating Precautions and Limitations	12.0	Reference Drawings
6.0	Installation Instructions	13.0	Customer-Certified Assembly Drawing(s)
7.0	Maintenance Requirements		



Revision Sheet

<i><u>Revision</u></i>	<i><u>Date</u></i>	<i><u>Changes</u></i>	<i><u>Description</u></i>
-	02/03/2004	Original Issue	

1.0 PHYSICAL DESCRIPTION AND OPERATION OF EQUIPMENT

1.1 Double-Disc Gate Valves

The double-disc design is unique in that there are two independent discs. During each closing stroke, immediately prior to the disc seating, each disc rotates a few degrees in the plane of the seats. This rotating feature allows the disc to seat in a different position on each closing stroke, providing for equal wear and preventing small imperfections from being agitated into major leakage problems.

The wedge assembly is designed to impart sufficient thrust to each disc to maintain acceptable low-pressure seat leakage. As the differential pressure across the disc increases, the seating load also increases, thus maintaining acceptable leakage through the entire range of operating differential pressures. Since the discs are completely independent of each other and the design is essentially symmetrical, zero leakage can be maintained in either direction, depending only on the direction of flow. This feature eliminates the necessity of installing a check valve to stop reverse flow.

To operate these manual valves, turn the tee handle in a clockwise direction for closure and counterclockwise for opening.

2.0 DESIGN CONDITIONS

Refer to the applicable drawing(s) in Section 13 of this manual.



3.0 OPERATING CONDITIONS

Refer to the applicable drawing(s) in Section 13 of this manual.

4.0 TEST CONDITIONS

4.1 Each valve covered by this manual has received the following hydrostatic tests with no measurable leakage

4.1.1 A shell hydrostatic test at 1.5 times the 100°F pressure rating.

4.1.2 A seat leakage and disc closure test at 110% of the 100°F pressure rating.

4.1.3 A backseat leakage test at 110% of the 100°F pressure rating.

4.1.4 A packing test at 110% of the 100°F pressure rating.

5.0 OPERATING PRECAUTIONS AND LIMITATIONS

- 5.1 Maximum hydrostatic test pressure shall not exceed the values imposed by the ASME Code, Section III.

6.0 INSTALLATION INSTRUCTIONS

6.1 Lifting and Handling Requirements and Limitations

6.1.1 Good judgment should be exercised in selecting a lifting device that will safely support the unit's weight.

6.2 Assembly Instructions

6.2.1 The valves have been shipped in a clean condition. Examine the lines and the valve ports for foreign matter prior to installation and clean them thoroughly if they have been exposed to the elements; (BEFORE CLEANING IN THIS FASHION, CHECK AT THE SITE TO SEE IF A SPECIFIC CLEANING PROCEDURE SHOULD BE FOLLOWED.) Open the valves fully and flush them out with water, if possible; otherwise, blow them out with air or steam.

In performing this cleaning procedure, the ports should be vertical and the stem horizontal to assure complete removal of all matter that might have accumulated during storage.

6.2.2 Ensure that there is no line sag at the point of installation. Eliminate any pipeline deviation by the proper use of pipeline hangers or a similar device.

6.2.3 Where possible, install the valves with the stem vertical. When other orientations are used, take care when disassembling the valve to avoid any internal damage.

6.2.4 Remove the end protectors and clean the socket weld ends or, in the case of butt weld end valves, clean with a solvent such as acetone in preparation for welding the valve into the line. The valves should then be blocked or slung into position with an apparatus that is sufficient to hold the valve assembly weight while the valve is being welded into the line. WELDING MUST TAKE PLACE WITH THE DISC IN THE OPEN POSITION.

6.3 Pre-Operational Checks

6.3.1 After installation, the operation of manual valves should be verified by closing the valve. The valve should seat tightly with less than 80 lbs. of push/pull combined force on the tee handle. If the valve does not close tightly, do not apply extra leverage; instead, refer to Paragraph 9.4 A and B.

7.0 MAINTENANCE REQUIREMENTS

7.1 Preventive Maintenance

7.1.1 Check all nuts and bolts periodically to ensure tightness and to forestall possible leaks. Recommended torque values are presented in Section 11.0.

7.1.2 Keep valve stem clean and properly lubricated.

7.1.3 Check conditions of packing and replace as necessary.

7.2 Recommended Spare Parts

7.2.1 Recommended spare parts are packing and pressure seal gaskets. The recommended quantity is one (1) set of packing and one (1) pressure seal gasket for every two (2) valves of a particular type. However, not less than one (1) set of the above for each type.

7.3 Lubrication

7.3.1 Apply a light coating of lubricant (Dow Corning Molykote 111 Compound, Dow Corning Molykote P37 paste or equal) to the threaded area of the stem when necessary.

7.3.2 The bearing area in the yoke bushing can be lubricated via the grease fitting (340) with the above-mentioned lubricants.

8.0 PERIODIC IN-SERVICE TESTING RECOMMENDATIONS AND PROCEDURES

- 8.1 It is recommended that the valve be operated from full open to full close at least once every six months.

9.0 MAINTENANCE INSTRUCTIONS

- 9.1 The following instructions cover the disassembly and reassembly of a Series 1888 double-disc gate valve. Typical valve configuration is shown in Figure 1 (see Section 12).

CAUTION

CHECK ONE PRESSURE: IF LINE IS STILL UNDER PRESSURE, VENT BEFORE VALVE DISASSEMBLY IS STARTED

9.1.1 Disassembly

Extreme care should be taken to avoid possible damage to the valve's moving parts. It is recommended that valves be placed in a vertical position for disassembly, if possible. For valves inline, take special care not to drop or damage any of the internals.

Ensure that the stem and disc pack do not separate when removed. They are removed as one unit until both are adequately supported. Failure to remove as one unit could cause damage to the discs.

After removal from the valve, care should be taken to protect the seating surface of the discs from damage. The discs should be placed in a clean area until ready to replace in the valve. THE SLIGHTEST NICK OR SCRATCH ON A SEATING SURFACE COULD PREVENT COMPLETE SHUT-OFF AND NECESSITATE EXTENSIVE REWORK OR REPLACEMENT.

- (a) Place the valve in the closed position without wedging the discs into position by closing the valve and then opening about one-half of a revolution of the tee handle.
- (b) Remove the handwheel nut (240) from the yoke sleeve (017). Remove the tee handle (175) and thrust washer (147) from the yoke sleeve (017) by sliding it up and over the yoke sleeve.
- (c) Remove the tee handle (175) and thrust washer (147) from the yoke sleeve (017) by sliding it up and over the yoke sleeve.
- (d) Remove the yoke clamp nut (233), allowing removal of the yoke capscrew (217).
- (e) Rotate the yoke (011) in a counterclockwise direction to remove from the body (001) and slide it up and over the yoke sleeve.
- (f) Turn the yoke sleeve (017) off the stem (025).

9.0 MAINTENANCE INSTRUCTIONS *(Continued)*

9.1.1 Disassembly (Continued)

- (g) Remove the gland bolt nuts (234), allowing removal of the gland bolts (210).
- (h) Lift the flange gland (133) upward and remove the packing (110, 112) from the stuffing box. Removal of the packing is best accomplished with a packing hook or similar device.
- (i) Loosen the gland retainer setscrews (220) until they do not make contact with the gasket retainer (033). Then turn the gland retainer (131) counterclockwise off the bonnet (002). Turn the gasket retainer (033) out of the body (001). If the bonnet (002) drops and turns with the gland retainer (131), grasp the stem (025) and lift to hold the bonnet, thus preventing it from rotating.
- (j) Remove the pressure seal gasket (030) by carefully lifting the bonnet (002). It is imperative that the bonnet be lifted over the stem as straight as possible to eliminate the possible scoring of the stem. If the bonnet is wedged into position, carefully lift up on the stem until the gasket and bonnet come free.
- (k) The stem (025), wedge and disc assembly (069, 071, 269, 004) can now be lifted from the valve body. As the discs (004) rise above the guides in the valve body, they should be retained to reduce the possibility of them falling from the wedges (069, 071) and becoming damaged by falling on the lapped surfaces (refer to Figure 2).
- (l) Remove the discs (004) from the upper wedge (069) and place them where they will not become damaged or scratched.
- (m) The stem (025) can be removed from the upper wedge (069) by sliding it from the "T" slot. Be careful that the wedges do not separate and the wedge spring (269) is lost.
- (n) At this time, the discs and seat rings may be lapped, if required. The seating surfaces should be inspected to determine if scratches or minor imperfections can be corrected by lapping and/or replacement parts are necessary. (Refer to Paragraph 9.3 for lapping instructions.)

9.0 MAINTENANCE INSTRUCTIONS (Continued)

9.1.2 Assembly

Assembly of the valves is simply the reverse of disassembly. Prior to reassembly, read the following special instructions.

- (a) All dirt, scale and foreign matter should be removed from inside the valve body and bonnet.
- (b) Check the seating surfaces to determine that scratches or minor imperfections do not exist on the discs or seat rings. If any are evident, lap these surfaces until none are visible. (Reference Paragraph 9.3.)
- (c) Insert the stem (025) into the "T" slot in the upper wedge (069). The lower wedge (071), wedge spring (269) and discs (004) can now be positioned on the upper wedge. As the stem and disc pack are lowered into the valve body, they should be contained to reduce the possibility of falling and becoming damaged.
- (d) Once the stem/disc pack assembly is positioned in place, the bonnet (002) can be lowered into the body neck. Care must be taken in lowering the bonnet onto the stem to prevent possible scoring.
- (e) With the bonnet resting inside the body neck, a new pressure seal gasket (030) can be inserted. Because tolerances are close and the gasket may cock, it must be inserted with care.
- (f) Thread the gasket retainer (033) into the body, tighten to the bottom of the threads and back out enough to align the packing gland bolts on the valve body. With the gasket retainer in the proper position, the gland retainer (131) can be lowered over the stem and threaded onto the bonnet (002). The bonnet will be raised squarely until it is firmly in contact with the pressure seal gasket.
- (g) Note that it is not necessary to torque the gland retainer. The bonnet is truly sealed by pressure. The only function of the retainer is to hold the bonnet in contact with the gasket until it is deformed by pressure, locking the joint together and ensuring a tight seal. Since the bonnet is sealed by pressure, constant cycling will compress the gasket and necessitate tightening of the gland retainer setscrews.
- (h) Once the bonnet is in the proper position, the gland retainer may require backing off to align the slots for the gland bolts. Once this has been accomplished, the gland retainer setscrews (220) should be installed and tightened (see Section 11.0 for recommended torque values).

9.0 MAINTENANCE INSTRUCTIONS *(Continued)*

9.1.2 Assembly (Continued)

- (i) Install the packing into the bonnet in accordance with Section 9.2.
- (j) Place the gland bolts (210) into the slots and through the flange gland (133) and tighten the gland stud nuts (234) (see Section 11.0).
- (k) Replacement of the yoke (011), yoke sleeve (017), thrust washer (147), tee handle (175) and handwheel nut (240) can be accomplished by reversing the procedure specified in Paragraph 9.1.1 (a), (b), (c), (d), (e) and (f).

9.2 Replacement of Packing (Reference Figure 1)

If the valve is in service, backseat it. If the valve is not backseated, be sure that line is depressurized.

(Refer to Figure 1 for referenced part designations.)

- (a) Remove the two (2) gland stud nuts (234) and raise the flange gland (133), allowing the gland bolts (210) to be removed.
- (b) Lift the flange gland (133) upward and away from the stuffing box area.
- (c) Use a packing hook or similar device to remove the old packing.
- (d) Install the packing (110, 112) a few rings at a time, carefully placing the joint of each ring approximately 180° from the preceding piece to prevent a leakage path. It might be necessary to slightly flatten each packing ring prior to installation to allow easy insertion within the stuffing box. The flange gland (133) can be used to seat the packing in position once a ring has been slipped within the box.
- (e) Upon completely filling the stuffing box, replace the nuts and bolts. Very carefully draw the packing to assure that the flange gland is even and that the bore of the flange gland is concentric with the valve stem. (If the flange gland (133) is drawn unevenly, scoring of the stem may result; or the gland might be tilted, which could cause binding.) Recommended torque values can be found in Section 11.0.
- (f) Check the packing periodically (six-month intervals), replacing as needed.

9.0 MAINTENANCE INSTRUCTIONS (Continued)

9.3 Lapping Procedure

After the valve has been disassembled, a visual inspection of the seating surfaces of the discs (004) and seat rings (013) can be made to determine if lapping is necessary to remove any minor scratches on these parts prior to assembling the valve. Abide by the following procedure:

- (a) The disc should be lapped on a flat, grooved lapping plate or, if available, a lapping machine can be used. A “medium” grade lapping compound should be used for the first and successive applications and a “fine” grade compound similar to “Clover A Grit No. 280” should be used for the final lapping process.
- (b) If it is necessary to lap the face of the seat ring, a standard lapping plate can be used of approximately the same diameter as the disc.

9.4 Troubleshooting

A. EXCESSIVE TEE HANDLE (175) EFFORT OR BINDING

Excessive tee handle effort or binding indicates that the stem (025) either needs to be lubricated or the flange gland (133) is too tight as a result of the gland nuts being tightened unevenly. Lubrication (Paragraph 7.3) should be checked at regular intervals of six months. To evenly tighten the gland nuts, they should be loosened and retightened in an alternating fashion.

B. LEAKAGE BETWEEN THE DISC (004) AND SEAT RING (013)

Leakage between the disc (004) and seat ring (013) could be an indication that foreign matter is on the seating surfaces, in which case the valve should be opened and closed ONE TIME in an attempt to dislodge any matter that might have inadvertently lodged there. DO NOT OPEN AND CLOSE THE VALVE MORE THAN ONCE, SINCE THIS COULD CAUSE PERMANENT DAMAGE TO THE SEATING SURFACES IF THE FOREIGN MATTER IS SECURELY LODGED IN PLACE. Instead, disassemble the valve and remove the sources of the trouble. If no foreign matter is found, inspect the seating surfaces of the valve for signs of a scarred or damaged seat—in which case the seating surfaces of the disc (004) and seat ring (013) should be lapped until no visible defects remain. (Refer to Paragraph 9.3.)

C. LEAKAGE AROUND STEM (025) AND THROUGH THE STUFFING BOX

Worn packing (110, 112). Replace the packing following the instructions set forth in Paragraph 9.2 in this section.

10.0 STORAGE REQUIREMENTS


The valves have been shipped in the closed position. Upon receipt of the valves at destination, the crates should be examined thoroughly for signs of mishandling or damage during shipment. With the valves strapped to the shipping skids, all yoke cap and gland bolting should be checked to ensure that the joints are secure. On occasion, bolting could become loosened during shipment and handling.

The valves should be stored in a sheltered area to protect them from the elements, dirt and foreign material. They should not be exposed to the atmosphere, uncrated or removed from the shipping skids, except in a clean area just prior to installation.

If the valves are not to be installed within a short period of time after receipt and will require long-term storage, the following should be adhered to:

- (a) The valves should be stored in an upright position, stem vertical, and where there is minimal temperature variation and the temperature does not drop below 50°F.
- (b) In their storage condition, the valves should be wrapped in polyethylene to prevent accumulation of dust or foreign matter.
- (c) A check-off tag should be affixed to each unit and should be dated and signed off by the inspector witnessing the inspection, which is recommended at six-month intervals.
- (d) The shelf life for grafoil and graphite filament packing and spiral-wound gaskets is indefinite when stored under the proper conditions.

Flowserve gate valves are supplied with a crowned sealing surface on the seat in order to provide precise seat width and tight sealing. Lapping of the seat will cause the sealing band width to be significantly increased. After all seat refinishing operation, the seat width must be checked against the dimensions supplied below and reduced if necessary. Failure to do so could create leakage problems, particularly at lower pressures.

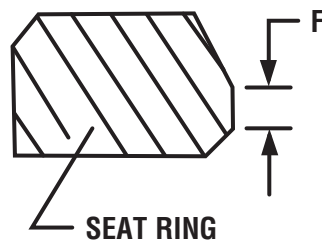

VALVE SIZE	F
	1888#
1/2"	.062
3/4"	.062
1"	.062
1-1/4"	.062
1-1/2"	.062
1-3/4"	.062
2"	.062

11.0 BOLTING TORQUE VALUES

At intervals of not more than six (6) months, check the tightness of all bolting. The recommended torque values for all bolting are shown below:


		TORQUE ft-lb.	
PART #	DESCRIPTION	NOMINAL	MAXIMUM
210	Gland Bolts	10	15
217	Yoke Capscrew	20	25
220	Gland Retainer Setscrews	9	10
240	Handwheel Nut	20	25

SECTION 12.0

REFERENCE DRAWINGS

Figure 1

PART NO	QTY	DESCRIPTION
001	1	BODY
002	1	BONNET
004	2	DISCS
011	1	YOKE
013	2	SEAT RINGS
017	1	YOKE SLEEVE
025	1	STEM
030	1	PRESSURE SEAL GASKET
033	1	GASKET RETAINER
069	1	UPPER WEDGE
071	1	LOWER WEDGE
110	3	PACKING RINGS
112	2	PACKING RINGS (END)
117	1	BACKSEAT
131	1	GLAND RETAINER
133	1	FLANGE-GLAND
147	1	THRUST WASHER
175	1	TEE HANDLE
210	2	GLAND BOLTS
217	1	YOKE CAPSCREW
220	4	GLAND RETAINER SETSCREWS
233	1	YOKE CLAMP NUT
234	2	GLAND STUD NUTS
240	1	HANDWHEEL NUT
269	1	WEDGE SPRING
340	1	GREASE FITTING
345	1	NAMEPLATE
346	1	IDENTIFICATION PLATE

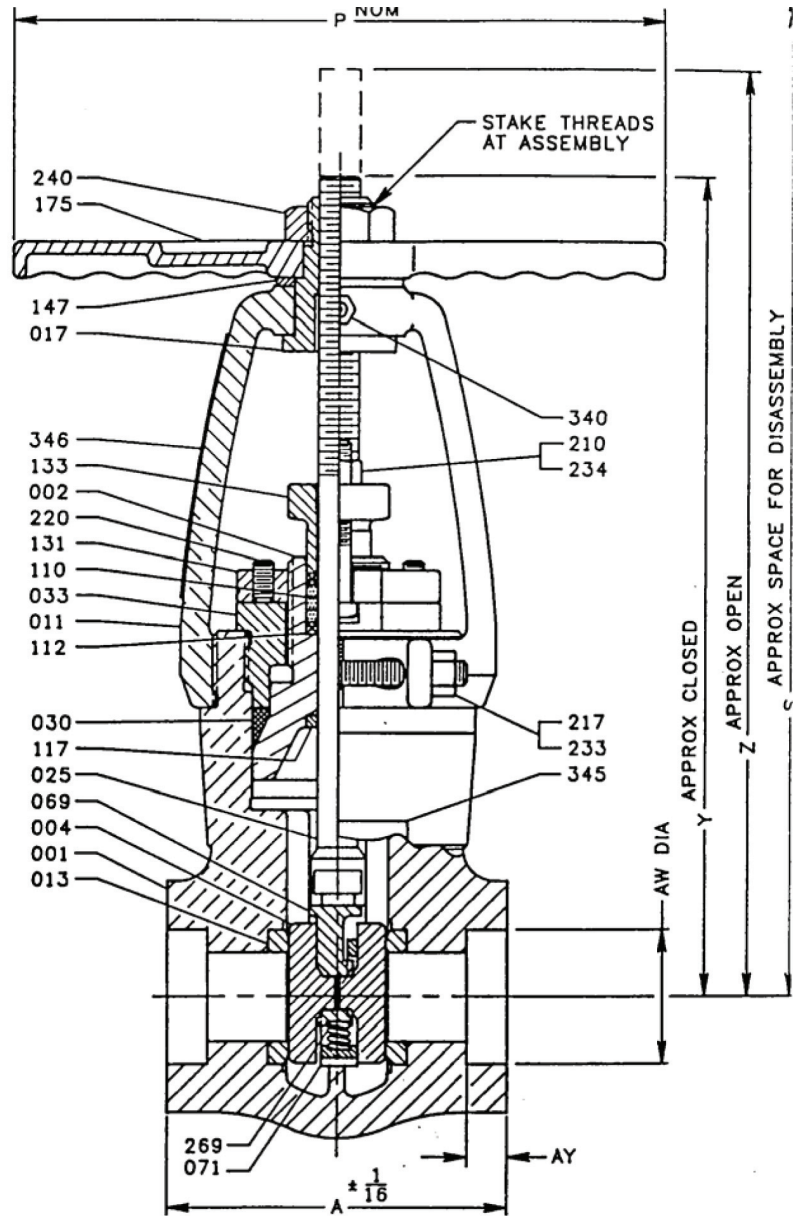


Series 1888

Valve Size	A	P	S	Y	Z	AW	AY	Approx Wgt.	Valve C _v
2"-1888 DD	5-1/4	10	20-1/4	12-7/8	14-3/4	2.406	625	36 LBS	82
1-1/2"-1888 DD	5-1/4	10	20-1/4	12-7/8	14-3/4	1.915	.500	36 LBS	135
1-1/4"-1888 DD	4-1/2	10	19-1/4	12-11/16	14-1/16	1.675	.500	27 LBS	35
1"-1888 DD	4-1/2	10	19-1/4	12-11/16	14-1/16	1.330	.500	27 LBS	51
3/4"-1888 DD	4-1/2	10	19-1/4	12-11/16	14-1/16	1.065	.500	27 LBS	27

NOTE: ALL DIMENSIONS ARE IN INCHES

Figure 2

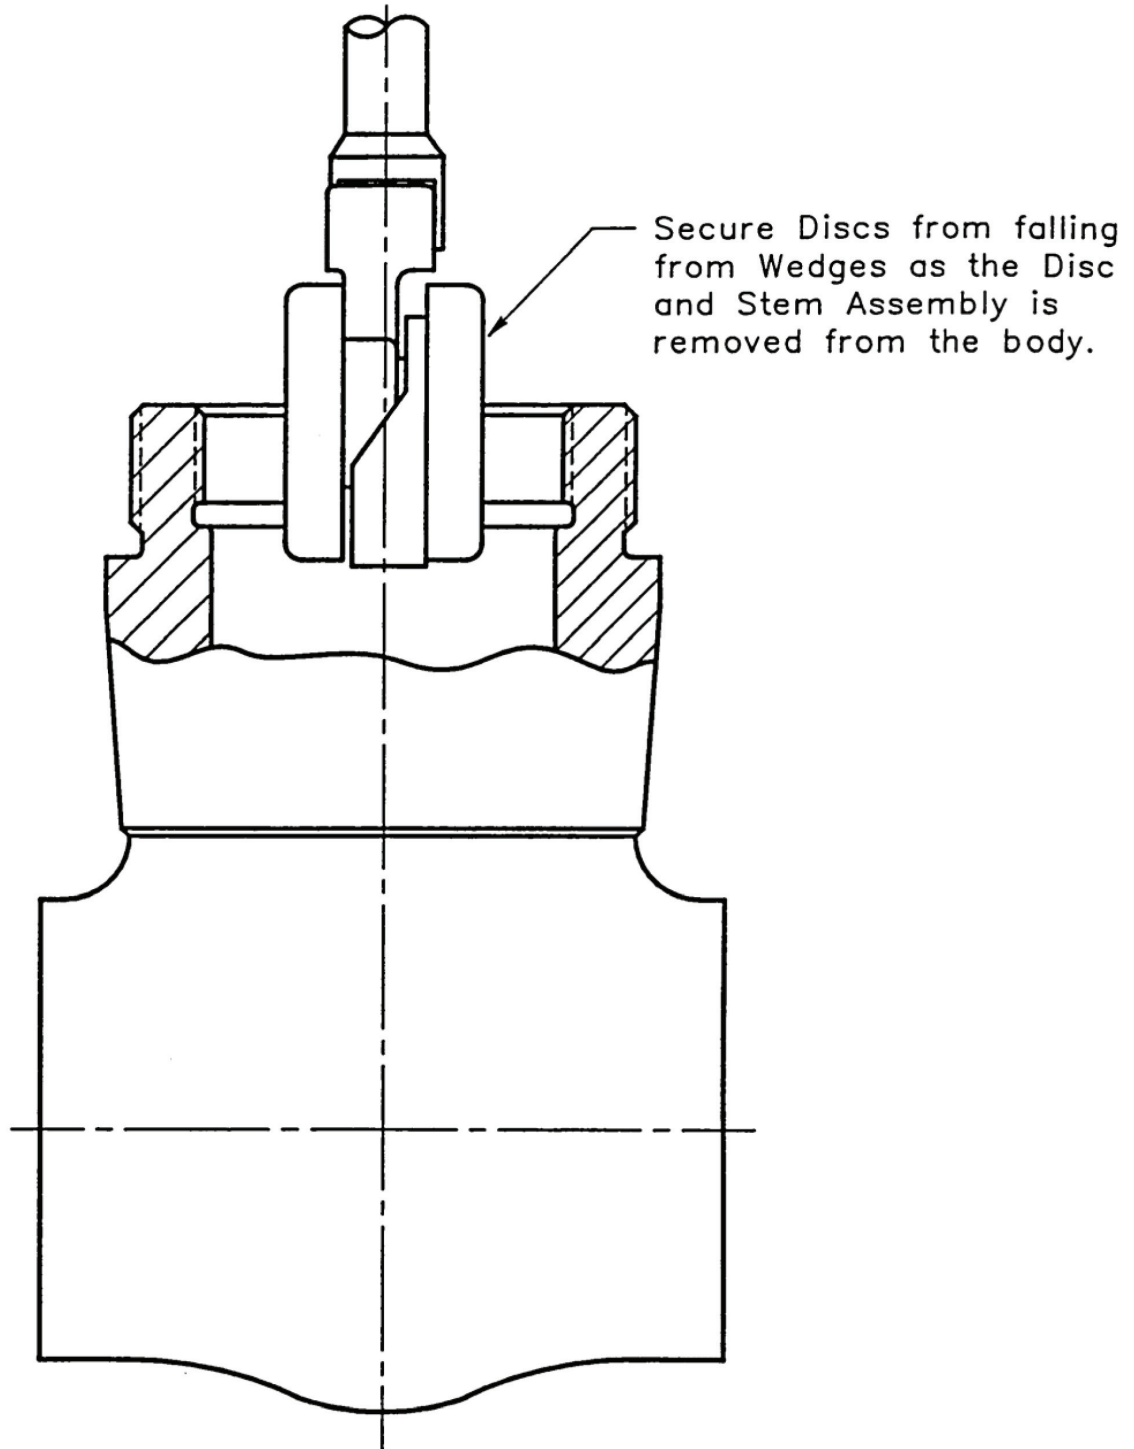

Handling Disc and Stem Assembly

SECTION 13.0

CUSTOMER-CERTIFIED ASSEMBLY DRAWING(S)



United States
Flowserve Corporation
Flow Control Division
1900 S. Saunders Street
Raleigh, NC 27603
Phone: (919) 832-0525
Fax: (919) 831-3369

FCD ADENIM0001-00 Printed in USA.

To find your local Flowserve representative:

For more information about Flowserve Corporation,
visit www.flowserve.com or call USA 1 800 225 6989

Flowserve Corporation has established industry leadership in the design and manufacture of its products. When properly selected, this Flowserve product is designed to perform its intended function safely during its useful life. However, the purchaser or user of Flowserve products should be aware that Flowserve products might be used in numerous applications under a wide variety of industrial service conditions. Although Flowserve can (and often does) provide general guidelines, it cannot provide specific data and warnings for all possible applications. The purchaser/user must therefore assume the ultimate responsibility for the proper sizing and selection, installation, operation, and maintenance of Flowserve products. The purchaser/user should read and understand the Installation Operation Maintenance (IOM) instructions included with the product, and train its employees and contractors in the safe use of Flowserve products in connection with the specific application.

While the information and specifications contained in this literature are believed to be accurate, they are supplied for informative purposes only and should not be considered certified or as a guarantee of satisfactory results by reliance thereon. Nothing contained herein is to be construed as a warranty or guarantee, express or implied, regarding any matter with respect to this product. Because Flowserve is continually improving and upgrading its product design, the specifications, dimensions and information contained herein are subject to change without notice. Should any question arise concerning these provisions, the purchaser/user should contact Flowserve Corporation at any one of its worldwide operations or offices.

© 2008 Flowserve Corporation, Irving, Texas, USA. Flowserve is a registered trademark of Flowserve Corporation.