




Installation Instructions

BW Seals® U Series

Balanced Pusher Seal

U, UC, UO, UCQ, UOP, UOPQ, UZ

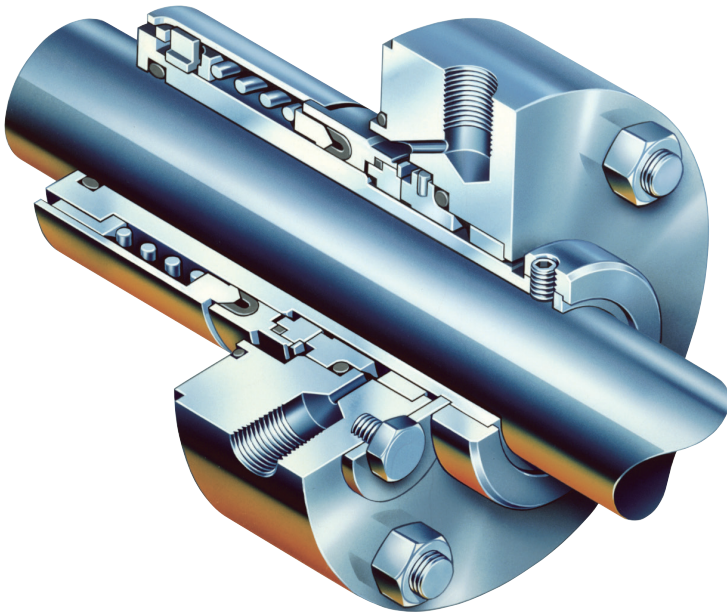


1 Equipment Check

- 1.1 **Follow plant safety regulations:**
 - lock out motor and valves.
 - wear designated personal safety equipment.
 - relieve any pressure in system.
 - consult plant MSDS files for hazardous material regulations.
- 1.2 **Adjust the bearings, coupling, and impeller** so that the shaft is in its operating axial position. **Disassemble equipment to allow access to seal installation area.**
- 1.3 **Remove all burrs and sharp edges** from the shaft, sleeve, seal housing bore and face, keyways, and any other feature that may contact sealing gaskets. Replace worn components. Clean all piping plans.
- 1.4 **Check requirements** for shaft, sleeve, and seal housing. See Figure 1.

Seal Chamber Requirements

Figure 1

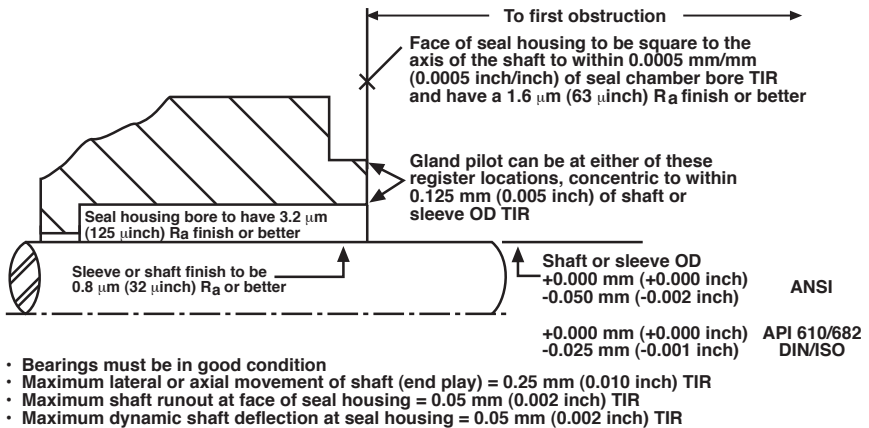

- 1.5 **Check assembly drawing** included with the seal for equipment dimensions, seal design, materials of construction, and piping connections.
- 1.6 **Measure all diameters and distances** to ensure they are dimensionally the same as shown on the seal assembly drawing.
- 1.7 **Handle all seal parts with care**, they are manufactured to precise tolerances. The seal faces are of special importance and should be kept perfectly clean.


2 Mechanical Seal Installation

- 2.1 **Review seal assembly drawing, seal assembly, and equipment** prior to installation. Read all notes on the seal assembly drawing. For hook sleeve designs, confirm the seal setting length shown on the assembly drawing matches the equipment. See Figure 1.

- 2.3 **Lightly lubricate external gaskets** with a lubricant compatible with both handled product and gasket material. Generally, silicon grease is suitable.
- 2.4 Install the seal onto the shaft and **locate it against the face of the seal chamber**. If applicable, ensure the sleeve is aligned with drive features on the shaft.
- 2.5 **Orient the ports** on the seal gland(s) as indicated by the seal assembly drawing and connected piping.
- 2.6 **Evenly torque gland bolts/nuts** for uniform gland pressure against the seal chamber. On cartridge seals, do not yet tighten drive collar screws.
- 2.7 Complete the remaining equipment assembly including bearings, if applicable.
- 2.8 On cartridge seals, **evenly tighten drive collar screws**.
- 2.9 **Disengage setting plates** from the sleeve and secure in disengaged position.
- 2.10 **Inspect equipment and driver alignment** in accordance with coupling and/or equipment manufacturer's instructions.
- 2.11 After bringing the equipment up to operating conditions, **recheck alignment** and make adjustments as necessary.

Installed Cartridge Seal Assembly

Figure 2

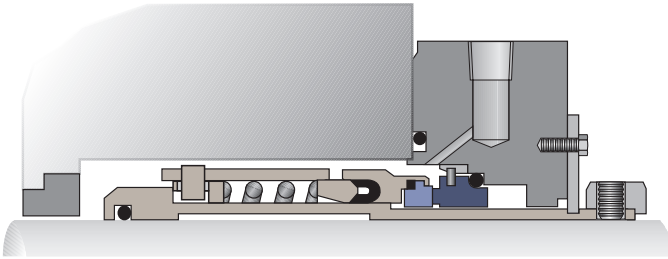

3 Piping Instructions

- 3.1 **Refer to the seal assembly drawing** for recommended seal piping plans. If auxiliary systems are required, follow all installation and operating instructions provided with these systems.
- 3.2 **Minimize restrictions**, total tubing length and number of bends especially in closed loop systems. Unless otherwise specified, the minimum internal diameter for tubing and connecting hardware should be 19 mm (0.750 inch).
- 3.3 **Do not start the equipment dry. Vent the equipment, seal chamber, and all piping systems** then startup support systems before starting equipment.

The images of parts shown in these instructions may differ visually from the actual parts due to manufacturing processes that do not affect the part function or quality.



TO REORDER REFER TO
B/M # _____
F.O. _____

4 Repair

This product is a precision sealing device. The design and dimension tolerances are critical to seal performance. Only parts supplied by Flowserve should be used to repair a seal. To order replacement parts, refer to the part code and B/M number. A spare backup seal should be stocked to reduce repair time.

When seals are returned to Flowserve for repair, **decontaminate the seal assembly** and include an order marked **"Repair or Replace."** **A signed certificate of decontamination** must be attached. **A Material Safety Data Sheet (MSDS) must be enclosed** for any product that came in contact with the seal. The seal assembly will be inspected and, if repairable, it will be rebuilt, tested, and returned.

FIS114eng REV 09/2018 Printed in USA

To find your local Flowserve representative
and find out more about Flowserve Corporation,
visit www.flowserve.com

Flowserve Corporation has established industry leadership in the design and manufacture of its products. When properly selected, this Flowserve product is designed to perform its intended function safely during its useful life. However, the purchaser or user of Flowserve products should be aware that Flowserve products might be used in numerous applications under a wide variety of industrial service conditions. Although Flowserve can provide general guidelines, it cannot provide specific data and warnings for all possible applications. The purchaser/user must therefore assume the ultimate responsibility for the proper sizing and selection, installation, operation, and maintenance of Flowserve products. The purchaser/user should read and understand the Installation Instructions included with the product, and train its employees and contractors in the safe use of Flowserve products in connection with the specific application.

While the information and specifications contained in this literature are believed to be accurate, they are supplied for informative purposes only and should not be considered certified or as a guarantee of satisfactory results by reliance thereon. Nothing contained herein is to be construed as a warranty or guarantee, express or implied, regarding any matter with respect to this product. Because Flowserve is continually improving and upgrading its product design, the specifications, dimensions and information contained herein are subject to change without notice. Should any question arise concerning these provisions, the purchaser/user should contact Flowserve Corporation at any one of its worldwide operations or offices.

© 2013 Flowserve Corporation

USA and Canada

Kalamazoo, Michigan USA
Telephone: 1 269 381 2650
Telefax: 1 269 382 8726

Europe, Middle East, Africa

Etten-Leur, the Netherlands
Telephone: 31 765 028 200
Telefax: 31 765 028 487

Asia Pacific

Singapore
Telephone: 65 6544 6800
Telefax: 65 6214 0541

Latin America

Mexico City
Telephone: 52 55 5567 7170
Telefax: 52 55 5567 4224