


Worthington® ERPN centrifugal pumps

Installation Operation Maintenance

Horizontal, End Suction

Original Instructions

PCN=71569274, 71569275, 71569276 06-16 (E)

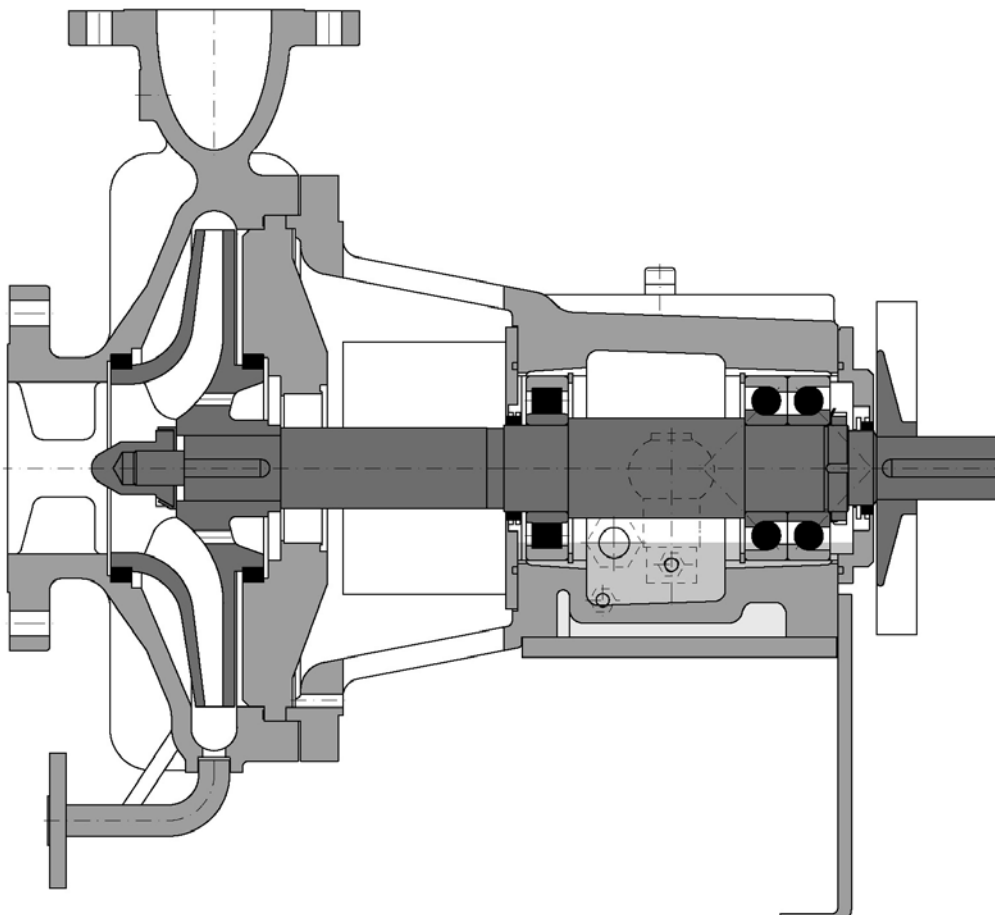

These instructions should be read prior to installing, operating, using and maintaining this equipment.



CONTENTS

	PAGE
1.0 INTRODUCTION AND SAFETY	3
1.1 GENERAL	3
1.2 CE MARKING AND APPROVALS	3
1.3 DISCLAIMER	3
1.4 COPYRIGHT	3
1.5 DUTY CONDITIONS	3
1.6 SAFETY	4
1.7 WARNING LABEL	8
1.8 SPECIFIC MACHINE PERFORMANCE	9
1.9 NOISE LEVEL	9
1.10 CE DECLARATION	11
2.0 TRANSPORT AND STORAGE	12
2.1 CONSIGNMENT RECEIPT AND UNPACKING	12
2.2 HANDLING	12
2.3 LIFTING	12
2.4 STORAGE	13
2.5 RECYCLING AND END OF PRODUCT LIFE	13
3.0 DESCRIPTION	13
3.1 CONFIGURATION	13
3.2 NOMENCLATURE	13
3.3 DESIGN OF MAJOR PARTS	13
3.4 PERFORMANCE AND OPERATING LIMITS	14
4.0 INSTALLATION	14
4.1 LOCATION	14
4.2 PART ASSEMBLIES	14
4.3 FOUNDATION	14
4.4 INITIAL ALIGNMENT	15
4.5 PIPING	15
4.6 ELECTRICAL CONNECTIONS	16
4.7 FINAL SHAFT ALIGNMENT CHECK	17
5.0 COMMISSIONING START-UP, OPERATION AND SHUTDOWN	17
5.1 PRECOMMISSIONING PROCEDURE	17
5.2 PUMP LUBRICANTS	17
5.3 IMPELLER CLEARANCE	25
5.4 DIRECTION OF ROTATION	25
5.5 GUARDING	25
5.6 PRIMING AND AUXILIARY SUPPLIES	25
5.7 STARTING THE PUMP	26
5.8 OPERATION	26
5.9 STOPPING AND SHUTDOWN	26
5.10 HYDRAULIC, MECHANICAL AND ELECTRICAL DUTY	26
6.0 MAINTENANCE	27
6.1 GENERAL	27
6.2 MAINTENANCE SCHEDULE	27
6.3 SPARE PARTS	28
6.4 RECOMMENDED SPARES	29
6.5 TIGHTENING TORQUE & TIGHTENING SEQUENCE	30
6.6 SETTING IMPELLER CLEARANCE	33
6.7 DISASSEMBLY	33
6.8 EXAMINATION OF PARTS	34
6.9 ASSEMBLY	34
7.0 AUXILIARIES	36
7.1 SEAL AND SEAL SYSTEMS	36
7.2 CHANGING OF MECHANICAL SEAL	38
8.0 FAULTS; CAUSES AND REMEDIES	39
9.0 CERTIFICATION	41
10.0 OTHER RELEVANT DOCUMENTATION AND MANUALS	41
10.1 SUPPLEMENTARY USER INSTRUCTIONS	41
10.2 CHANGE NOTES	41
10.3 ADDITIONAL SOURCES OF INFORMATION	41
10.4 ABBREVIATIONS	42

1.0 INTRODUCTION AND SAFETY

1.1 General



These Instructions must always be kept close to product's operating location or directly with the product.

Flowserve's products are designed, developed and manufactured with state-of-the-art technologies in modern facilities. The unit is produced with great care and commitment to continuous quality control, utilising sophisticated quality techniques, and safety requirements.

Flowserve is committed to continuous quality improvement and being at service for any further information about the product in its installation and operation or about its support products, repair and diagnostic services.

These instructions are intended to facilitate familiarization with the product and its permitted use. Operating the product in compliance with these instructions is important to help ensure reliability in service and avoid risks. The instructions may not take into account local regulations; ensure such regulations are observed by all, including those installing the product. Always coordinate repair activity with operations personnel, and follow all plant safety requirements and applicable safety and health laws/regulations.



These instructions must be read prior to installing, operating, using and maintaining the equipment in any region worldwide. The equipment must not be put into service until all the conditions relating to safety, noted in the instructions, have been met. Failure to follow and apply the present user instructions is considered to be misuse. Personal injury, product damage, delay or failure caused by misuse are not covered by the Flowserve warranty.

1.2 CE marking and approvals

It is a legal requirement that machinery and equipment put into service within certain regions of the world shall conform with the applicable CE Marking Directives covering Machinery and, where applicable, Low Voltage Equipment, Electromagnetic Compatibility (EMC), Pressure Equipment Directive (PED) and Equipment for Potentially Explosive Atmospheres (ATEX).

Where applicable the Directives, and any additional Approvals, cover important safety aspects relating to machinery and equipment and the satisfactory provision of technical documents and safety instructions. Where applicable this document incorporates information relevant to these Directives.

To establish Approvals and if the product itself is CE Marked check the serial number plate and the Certification.

1.3 Disclaimer

Information in these User Instructions is believed to be reliable. In spite of all the efforts of Flowserve Corporation to provide sound and all necessary information the content of this manual may appear insufficient and is not guaranteed by Flowserve as to its completeness or accuracy.

Flowserve manufactures products to exacting International Quality Management System Standards as certified and audited by external Quality Assurance organisations. Genuine parts and accessories have been designed, tested and incorporated into the products to help ensure their continued product quality and performance in use. As Flowserve cannot test parts and accessories sourced from other vendors the incorrect incorporation of such parts and accessories may adversely affect the performance and safety features of the products. The failure to properly select, install or use authorised Flowserve parts and accessories is considered to be misuse. Damage or failure caused by misuse is not covered by Flowserve's warranty. In addition, any modification of Flowserve products or removal of original components may impair the safety of these products in their use.

1.4 Copyright

All rights reserved. No part of these instructions may be reproduced, stored in a retrieval system or transmitted in any form or by any means without prior permission of Flowserve.

1.5 Duty conditions

This product has been selected to meet the specifications of your purchaser order. The acknowledgement of these conditions has been sent separately to the Purchaser. A copy should be kept with these instructions.



The product must not be operated beyond the parameters specified for the application. If there is any doubt as to the suitability of the product for the application intended, contact Flowserve for advice, quoting the serial number.

If the conditions of service on your purchase order are going to be changed (for example liquid pumped, temperature or duty) it is requested that the user seeks Flowserve's written agreement before start up.

1.6 Safety

1.6.1 Summary of safety markings

These user instructions contain specific safety markings where non-observance of an instruction would cause hazards. The specific safety markings are:



DANGER

This symbol indicates electrical safety instructions where non-compliance will involve a high risk to personal safety or the loss of life.



This symbol indicates safety instructions where non-compliance would affect personal safety and could result in loss of life.



This symbol indicates "hazardous and toxic fluid" safety instructions where non-compliance would affect personal safety and could result in loss of life.



CAUTION

This symbol indicates safety instructions where non-compliance will involve some risk to safe operation and personal safety and would damage the equipment or property.



This symbol indicates "strong magnetic field" safety instructions where non-compliance would affect personal safety, pacemakers, instruments or stored data sensitive to magnetic fields.



This symbol indicates explosive atmosphere marking according to ATEX. It is used in safety instructions where non-compliance in the hazardous area would cause the risk of an explosion.



This symbol is used in safety instructions to remind not to rub non-metallic surfaces with a dry cloth; ensure the cloth is damp. It is used in safety instructions where non-compliance in the hazardous area would cause the risk of an explosion.

Note:

The sign is not a safety symbol but indicates an important instruction in the assembly process.



This symbol indicates potential risks connected with extremely high temperatures.



This symbol indicates potential risks connected with extremely low temperatures.

1.6.2 Personnel qualification and training

All personnel involved in the operation, installation, inspection and maintenance of the unit must be qualified to carry out the work involved. If the personnel in question do not already possess the necessary knowledge and skill, appropriate training and instruction must be provided. If required the operator may commission the manufacturer / supplier to provide applicable training.

Always co-ordinate repair activity with operations and health and safety personnel, and follow all plant safety requirements and applicable safety and health laws/regulations.

1.6.3 Safety action


This is a summary of conditions and actions to help prevent injury to personnel and damage to the environment and to equipment. For products used in potentially explosive atmospheres section 1.6.4 also applies.



CAUTION

PREVENT EXCESSIVE EXTERNAL PIPE LOAD

Do not use pump as a support for piping. Do not mount expansion joints so that their force, due to internal pressure, acts on the pump flange.



CAUTION

ONLY CHECK DIRECTION OF MOTOR ROTATION WITH COUPLING ELEMENT/ PINS REMOVED


Starting in reverse direction of rotation will damage the pump.



CAUTION

ENSURE CORRECT LUBRICATION

(See section 5 *Commissioning, startup, operation and shutdown.*)




CAUTION

START THE PUMP WITH OUTLET VALVE PART OPENED

(Unless otherwise instructed at a specific point in the user instructions.)

This is recommended to avoid the risk of overloading and damaging the pump motor at full or zero flow. Pumps may be started with the valve further open only on installations where this situation cannot occur. Pump outlet valve shall be adjusted to comply with the duty following the run-up process (See section 5 *Commissioning, startup, operation and shutdown.*)



CAUTION

START THE PUMP WITH OUTLET VALVE FULLY OPEN

This is recommended to avoid the risk of overloading and damaging the pump motor where greater power is taken at low or shut off flow. Pump outlet valve shall be adjusted to comply with the duty following the

run-up process (See section 5 *Commissioning, startup, operation and shutdown*).

CAUTION NEVER RUN THE PUMP DRY

CAUTION INLET VALVES TO BE FULLY OPEN WHEN PUMP IS RUNNING
Running the pump at zero flow or below the recommended minimum flow continuously will cause damage to the seal.

CAUTION DO NOT RUN THE PUMP AT ABNORMALLY HIGH OR LOW FLOW RATES
Operating at a flow rate higher than normal or at a flow rate with no back pressure on the pump may overload the motor and cause cavitation. Low flow rates may cause a reduction in pump/bearing life, overheating of the pump, instability and cavitation/vibration.

CAUTION When ambient temperatures are likely to drop below freezing point, the pump and any cooling and flushing arrangements must be drained or otherwise protected.

HANDLING COMPONENTS
Many precision parts have sharp corners and the wearing of appropriate safety gloves and equipment is required when handling these components. To lift heavy pieces above 25 kg (55 lbs) use a crane corresponding to the mass and in accordance with current local regulations.

DANGER
NEVER DO MAINTENANCE WORK WHILST THE UNIT IS CONNECTED TO POWER

HAZARDOUS LIQUIDS
When the pump is handling hazardous liquids care must be taken to avoid exposure to the liquid by appropriate siting of the pump, limiting personnel access and by operator training. If the liquid is flammable and/or explosive strict safety procedures must be applied.

Gland Packing must not be used when pumping hazardous liquids.

DRAIN PUMP AND ISOLATE PIPEWORK BEFORE DISMANTLING THE PUMP
The appropriate safety precautions should be taken where the pumped liquids are hazardous.

FLUORO-ELASTOMERS (When fitted)
When a pump has experienced temperatures over 250 °C (482 °F), partial decomposition of fluoro-elastomers (example: Viton) will occur. In this

condition these are extremely dangerous and skin contact must be avoided.

GUARDS MUST NOT BE REMOVED WHILE PUMP IS OPERATIONAL

THERMAL SHOCK
Rapid changes in the temperature of the liquid within the pump can cause thermal shock, which can result in damage or breakage of components and should be avoided.

NEVER APPLY HEAT TO REMOVE IMPELLER
Trapped lubricant or vapour could cause an explosion.

HOT AND COLD PARTS
If hot or freezing components or auxiliary heating supplies can present a danger to operators, they must be shielded to avoid accidental contact. If complete protection is not possible, the machine access must be limited to maintenance staff only. Note: bearing housings must not be insulated and drive motors and bearings may be hot.

If the temperature is greater than 68 °C (155 °F) or below 5 °C (41 °F) in a restricted zone, or exceeds local regulations, action as above shall be taken.

1.6.4 Products used in potentially explosive atmospheres

- Measures are required to:
- Avoid excess temperature
 - Prevent build up of explosive mixtures
 - Prevent the generation of sparks
 - Prevent leakages
 - Maintain the pump to avoid hazard

The following instructions for pumps and pump units when installed in potentially explosive atmospheres must be followed to help ensure explosion protection. Both electrical and non-electrical equipment must meet the requirements of European Directive 94/9/EC.

1.6.4.1 Scope of compliance

Use equipment only in the zone for which it is appropriate. Always check that the driver, drive coupling assembly, seal and pump equipment are suitably rated and/or certified for the classification of the specific atmosphere in which they are to be installed.


Where Flowserve has supplied only the bare shaft pump, the Ex rating applies only to the pump. The

party responsible for assembling the pump set shall select the coupling, driver and any additional equipment, with the necessary CE Certificate/ Declaration of Conformity establishing it is suitable for the area in which it is to be installed.

The output from a variable frequency drive (VFD) can cause additional heating affects in the motor and so, for pump sets with a VFD, the ATEX Certification for the motor must state that it covers the situation where electrical supply is from the VFD. This is particular requirement still applies even if the VFD is in a safe area.

1.6.4.2 Marking

An example of ATEX equipment marking is shown below. The actual classification of the pump will be engraved on the nameplate.

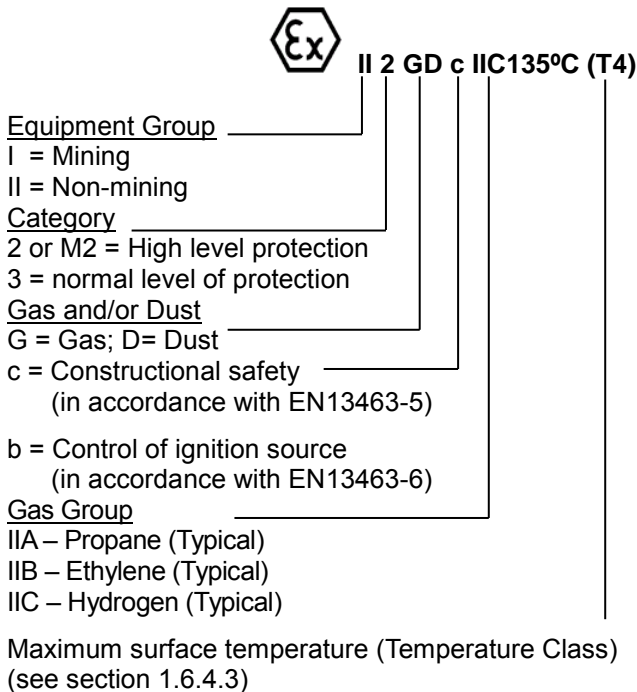

1.6.4.3 Avoiding excessive surface temperatures

ENSURE THE EQUIPMENT TEMPERATURE CLASS IS SUITABLE FOR THE HAZARD ZONE

Pumps have a temperature class as stated in the ATEX Ex rating on the nameplate. These are based on an ambient in the range of -80 to +55 °C (-112 to +131 °F); refer to Flowserve for ambient temperatures outside this range for this product.

The surface temperature on the pump is influenced by the temperature of the liquid handled. The maximum permissible liquid temperature depends on the ATEX temperature class and must not exceed the values in the table that follows.

Temperature class to EN 13463-1	Maximum surface temperature permitted	Temperature limit of liquid handled (* depending on material and construction variant - check which is lower)
T6	85 °C (185 °F)	Consult Flowserve
T5	100 °C (212 °F)	Consult Flowserve
T4	135 °C (275 °F)	115 °C (239 °F) *
T3	200 °C (392 °F)	180 °C (356 °F) *
T2	300 °C (572 °F)	275 °C (527 °F) *
T1	450 °C (842 °F)	400 °C (752 °F) *

* The table only takes the ATEX temperature class into consideration. Pump design or material, as well as component design or material, may further limit the maximum working temperature of the liquid.

The temperature rise at the seals and bearings and due to the minimum permitted flow rate is taken into account in the temperatures stated.

The responsibility for compliance with the specified maximum liquid temperature is with the plant operator.

Temperature classification “Tx” is used when the liquid temperature varies and when the pump is required to be used in differently classified potentially explosive atmospheres. In this case the user is responsible for ensuring that the pump surface temperature does not exceed that permitted in its actual installed location.

Do not attempt to check the direction of rotation with the coupling element/pins fitted due to the risk of severe contact between rotating and stationary components.

Where there is any risk of the pump being run against a closed valve generating high liquid and casing external surface temperatures it is recommended that users fit an external surface temperature protection device.

Avoid mechanical, hydraulic or electrical overload by using motor overload trips or a Power Monitor and make routine vibration monitoring.

In dirty or dusty environments, regular checks must be made and dirt removed from areas around close clearances, bearing housings and motors.

1.6.4.4 Preventing the build up of explosive mixtures

ENSURE THE PUMP IS PROPERLY FILLED AND VENTED AND DOES NOT RUN DRY

Ensure the pump and relevant suction and discharge pipeline system is totally filled with liquid at all times during the pump operation, so that an explosive atmosphere is prevented. In addition it is essential to make sure that seal chambers, auxiliary shaft seal

systems and any heating and cooling systems are properly filled.

If the operation of the system cannot avoid this condition the fitting of an appropriate Dry Run protection device is recommended (eg liquid detection or a Power Monitor).

To avoid potential hazards from fugitive emissions of vapour or gas to atmosphere the surrounding area must be well ventilated.

1.6.4.5 Preventing sparks



To prevent a potential hazard from mechanical contact the coupling guard must be non-sparking and anti-static.

To avoid the potential hazard from random induced current generating a spark the earth contact on the baseplate must be used.



Avoid electrostatic charge: do not rub non-metallic surfaces with a dry cloth; ensure cloth is damp.

The coupling must be selected to comply with 94/9/EC and correct alignment must be maintained.

1.6.4.5 Preventing leakage



The pump must only be used to handle liquids for which it has been approved to have the correct corrosion resistance.

Avoid entrapment of liquid in the pump and associated piping due to closing of suction and discharge valves, which could cause dangerous excessive pressures to occur if there is heat input to the liquid. This can occur if the pump is stationary or running.

Bursting of liquid containing parts due to freezing must be avoided by draining or protecting the pump and ancillary systems.

Where there is the potential hazard of a loss of a seal barrier fluid or external flush, the fluid must be monitored.

If leakage of liquid to atmosphere can result in a hazard, the installation of a liquid detection device is recommended.

1.6.4.6 Maintenance to the centrifugal pump to avoid the hazard



CORRECT MAINTENANCE IS REQUIRED TO AVOID POTENTIAL HAZARDS WHICH GIVE A RISK OF EXPLOSION


The responsibility for compliance with maintenance instructions is with the plant operator.

To avoid potential explosion hazards during maintenance, the tools, cleaning and painting materials used must not give rise to sparking or adversely affect the ambient conditions. Where there is a risk from such tools or materials, maintenance must be conducted in a safe area.

It is recommended that a maintenance plan and schedule is adopted (see section 6, *Maintenance*).to include the following.


- a) Any auxiliary systems installed must be monitored, if necessary, to ensure they function correctly.
- b) Gland packings must be adjusted correctly to give visible leakage and concentric alignment of the gland follower to prevent excessive temperature of the packing or follower.
- c) Check for any leaks from gaskets and seals. The correct functioning of the shaft seal must be checked regularly
- d) Check bearing lubricant level, and if the hours run show a lubricant change is required.
- e) Check that the duty condition is in the safe operating range for the pump.
- f) Check vibration, noise level and surface temperature at the bearings to confirm satisfactory operation.
- g) Check dirt and dust is removed from areas around close clearances, bearing housings and motors.
- h) Check coupling alignment and re-align if necessary.

1.7 Warning label





WARNING

ESSENTIAL PROCEDURES BEFORE STARTING:




INSTALL AND OPERATE EQUIPMENT ONLY IN ACCORDANCE WITH THE INSTRUCTION MANUAL SUPPLIED SEPERATELY!







ENSURE GUARDS ARE SECURELY IN PLACE!




ENSURE ALL EXTERNAL CONNECTIONS TO THE PUMP / SHAFT SEALING AND DRIVER ARE CONNECTED AND OPERATIONAL!







FILL PRIME UNIT AND SYSTEMS. DO NOT RUN DRY!
ENSURE UNIT ON A FIRM FOUNDATION!




COUPLING FACES ARE IN CORRECT ALIGNMENT PRIOR TO AND AFTER BOLTING BASEPLATE DOWN AND FIXING PIPEWORK!




SEE MANUAL FOR TOLERANCES!




ENSURE CORRECT DRIVER DIRECTION OF ROTATION WITH COUPLING ELEMENT / PINS REMOVED. OTHERWISE SERIOUS DAMAGE MAY RESULT!




CAUTION



THIS MACHINE MUST BE FILLED WITH OIL BEFORE STARTING!



FAILURE IN FOLLOWING THESE PROCEDURES MAY RESULT IN PERSONAL INJURY / OR EQUIPEMENT DAMAGE!



AK-WARN-(en)-05/00

1.8 Specific machine performance

For performance parameters see section 1.5, *Duty conditions*. When the Contract requirement specifies these to be incorporated into user instructions these are included here. Where performance data has been supplied separately to the purchaser these should be obtained and retained with these user instructions if required.

1.9 Noise level

Attention must be given to the exposure of personnel to the noise, and local legislation will define when guidance to personnel on noise limitation is required, and when noise exposure reduction is mandatory. This is typically 80 to 85 dBA.

The usual approach is to control the exposure time to the noise or to enclose the machine to reduce emitted sound. You may have already specified a limiting noise level when the equipment was ordered, however if no noise requirements were defined, then attention is drawn to the following table to give an indication of equipment noise level so that you can take the appropriate action in your plant.

Pump noise level is dependent on a number of operational factors, flow rate, pipework design and acoustic characteristics of the building, and so the values given are subject to a 3 dBA tolerance and cannot be guaranteed.

Similarly the motor noise assumed in the “pump and motor” noise is that typically expected from standard and high efficiency motors when on load directly driving the pump. Note that a motor driven by an inverter may show an increased noise at some speeds.

If a pump unit only has been purchased for fitting with your own driver then the “pump only” noise levels in the table should be combined with the level for the driver obtained from the supplier. Consult Flowserve or a noise specialist if assistance is required in combining the values.

It is recommended that where exposure approaches the prescribed limit, then site noise measurements should be made.

The values are in sound pressure level L_{pA} at 1 m (3.3 ft) from the machine, for “free field conditions over a reflecting plane”.

For estimating sound power level L_{WA} (re 1 pW) then add 14 dBA to the sound pressure value.



Power BHP	Power Kw.	dB(A) Value	Octave MID_BAND Frequency, HZ							
			63	125	250	500	1K	2K	4K	8K
3	2.2	67	54	58	58	56	56	56	54	59
3.7	2.7	68	58	62	62	60	60	60	58	53
4.7	3.5	69	59	63	63	61	61	61	59	54
6	4.4	70	64	64	62	62	60	55	50	50
7.6	5.6	71	61	65	65	63	63	63	61	56
9.4	6.9	72	62	66	66	64	64	64	62	57
12	8.8	73	67	67	65	65	63	58	53	53
15	11.0	74	68	68	66	66	64	59	54	54
19	14.0	75	69	69	67	67	65	60	55	55
24	17.6	76	70	70	68	68	66	61	56	56
31	22.8	77	67	71	71	69	69	69	67	62
39	28.7	78	68	72	72	70	70	70	68	63
49	36.0	79	69	73	73	71	71	71	69	64
62	45.6	80	70	74	74	72	72	72	70	65
77	56.6	81	71	75	75	73	73	73	71	66
95	69.9	82	75	75	73	73	71	66	61	61
115	84.6	83	77	77	75	75	73	68	63	63
145	106.6	84	78	78	76	76	74	69	64	64
190	139.7	85	79	79	77	77	75	70	65	65
250	183.8	86	80	80	78	78	76	71	66	66
350	257.4	87	81	81	79	79	77	72	67	67
500	367.6	88	78	82	82	80	80	80	78	73
700	514.7	89	79	83	83	81	81	81	79	74
940	691.2	90	80	84	84	82	82	82	80	75
1100	808.8	91	81	85	85	83	83	83	81	76

Sound pressure readings are for information only and are not subject to guarantee by Flowserve. Decibel readings do not include driver or system noise.

Pump tested at 100% of the best efficiency point at max. impeller diameter with water.

dB correction for combining noises (pump+motor)

Difference between two levels to be combined, dB	0	1	2	4	6	9	10
Add to the higher level to obtain the combined noise level, dB	3	2.5	2	1.5	1	0.5	0







Note :

- 1) The values showed are measured at a distance of 1 mt. (horizontally) from major pump surfaces and 1.5 mt. above the floor.
- 2) The values shown are expressed in dB.
- 3) For Noise Test Procedure refer to Works Standard L-109-0
- 4) The values shown have been derived from actual noise-test data and are based on the following conditions:
 - Equipment is located in a free field above a reflecting plane in which the reduction in noise level in all directions is 6db in each octave band for each doubling of distance.
 - Background noise is 10dB minimum below all noise levels in each octave band.
 - The values shown are at a distance of 1 meter (horizontally) from the major pump surface and 1,5 meters above the floor, using a standard pressure reference of 0,00002 newton per square meter.
 - Overall noise level, dB(A) is determined at points of maximum noise level and the values of all mid-band frequencies are basis A scale readings.

When the required condition flow is outside the range of 75 to 125% BEP, a part load correction (PLC) must be added to the noise level as follows:

Percent of BEP @ required impeller diameter	PLC in dB
74 to 62 or 126 to 136	+1
61 to 50 or 137 to 150	+2
49 to 38	+3
37 to 25	+4

1.10 CE Declaration

	
<p>Austria , A-2345 Brunn am Geb., Industriestraße B Nr. 6, Tel:++43 2236 31530, Fax: ++43 2236 33430</p>	
<p>DECLARATION OF CONFORMITY</p>	
<p>Section 1.0 <u>MACHINE DESCRIPTION</u></p> <p>Serial No Equipment/Item Purchase Order Model / Type MAWP  Hydro. Pressure Material Date DD/MM/YY Flow Head Speed Min-1 / RPM Motor kW Hz Volts Amps Connection Country of Destination</p>	
<p>Section 2.0 <u>APPLICABLE DIRECTIVES / REGULATIONS</u></p> <ul style="list-style-type: none"> - Machinery Directive 2006/42/EC Annex IIA - EMC Directive 2014/30/EU - Explosive Atmospheres Directive 2014/34/EU (ATEX). Only applicable when the  marking appears in section 1.0 Equipment without the  marking must not be used in potentially explosive atmospheres. - Notified Body holding the ATEX Technical Dossier - SIRA (518) Eccleston, ChesterCH4 9JN, United Kingdom 	
<p>Section 3.0 <u>APPLICABLE STANDARDS / SPECIFICATIONS</u></p> <ul style="list-style-type: none"> - EN809:1998+A1:2009, EN953:1997+A1:2009, ISO 13857:2008, ISO 12100:2010 - EN13463-1:2009, EN13463-5:2011, EN13463-6:2005 - API 610 8th, 9th, 10th or 11th ed. as applicable - API 682 1st, 2nd or 3rd ed. as applicable 	
<p>Section 4.0 <u>DECLARATION</u></p> <p>We, Flowserve (Austria) GmbH, at the above address, declare that under our sole responsibility for the supply of the machinery defined in SECTION 1.0 above, the said machinery complies with all the applicable Directives and Regulations set out in SECTION 2.0 above and with all the essential health and safety requirements applying to it when installed, operated and maintained in accordance with the applicable User Instruction manual(s).</p> <div style="text-align: center; margin-top: 20px;">  </div> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <div style="text-align: center;"> <p>Signed: Dipl.Ing.Goran Rakic Authorised Techn.Manager</p> </div> <div style="text-align: right;"> <p>Date: 03.05.2016</p> </div> </div>	

2.0 TRANSPORT AND STORAGE

2.1 Consignment receipt and unpacking

Immediately after receipt of the equipment it must be checked against the delivery/ shipping documents for its completeness and that there has been no damage in transportation. Any shortage and or damage must be reported immediately to Flowserve and received in writing within one month of receipt of the equipment. Latter claims cannot be accepted.

Check any create/boxes/wrappings for any accessories or spare parts, which may be packed separately with the equipment or attached to side walls of the box or equipment.

Each product has a unique serial number. Check that this number corresponds with that advised and always quote this number in correspondence as well as when ordering spare parts or further accessories.

2.2 Handling



Boxes, crates, pallets or cartons may be unloaded using fork lift vehicles or slings dependent on their size and construction.

2.3 Lifting




Four lifting lugs are provided on the baseplate to lift the complete unit.



Take care by applying slings or ropes about auxiliary piping and seal systems.

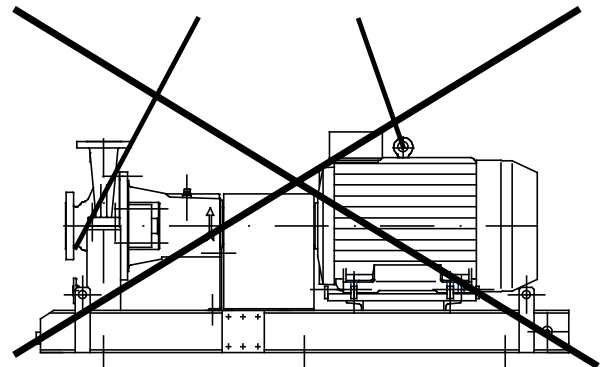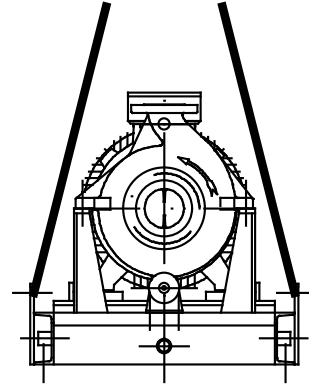

Bare pumps shall be lifted as shown below.

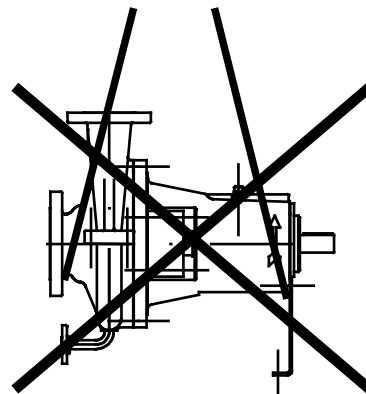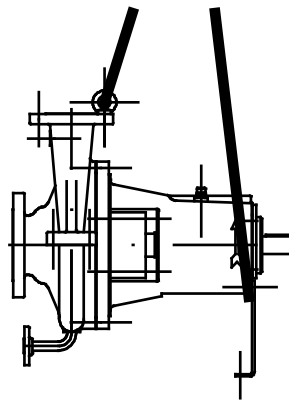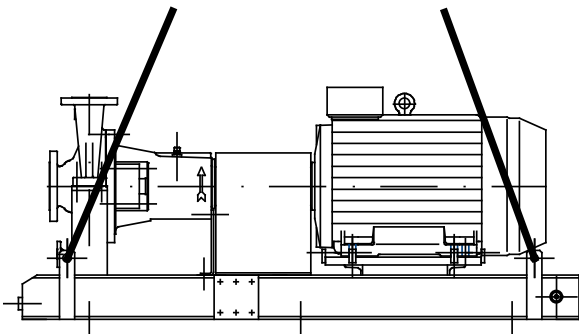



A crane must be used for all pump sets in excess of 25kg (55lb). Fully trained personnel must carry out lifting, in accordance with local regulations. The driver and pump weights are recorded on their respective nameplates.

2.4 Storage

If the unit will not be put immediately into service, it should be stored in a dry room. To avoid any damage during the storage period, the influence of any low or high frequency vibration must be totally inhibited. If the pump is delivered sealed in a plastic-wrapper, it is of max. importance to avoid any damage of that wrapper, because this will protect the pump against humidity. Therefore it must be checked if this wrapper has become cracked and if so, the wrapper must be renewed.

2.4.1 Long period storage

If the pump is delivered in a plastic bag, the preservation stands up for one year. If the storage period exceeds this time, the preservation must be checked and renewed. Also the air tight plastic bag must be changed. Moreover we recommend to order a Flowserve Service Engineer for checking the pump before the first start up.

2.5 Recycling and end of product life

At the end of the service life of the product or its parts, the relevant materials and parts should be recycled or disposed of using an environmentally acceptable method and local regulations. If the product contains substances, which are harmful to the environment, these should be removed and disposed of in accordance with current regulations. This also includes the liquids and or gases in the "seal system" or other utilities.



Make sure that hazardous substances are disposed of safely and that the correct personal protective equipment is used. The safety specifications must be in accordance with the current regulations at all times.

3.0 DESCRIPTION

3.1 Configuration

The model ERP N belongs to Flowserve's family of API 610 end suction pumps.

The pump line is based on a modular system, thus providing maximum design and operating flexibility. The pump is available with several impeller designs.

- closed impeller with front and back wear rings. Above a certain size the axial thrust is balanced by balancing holes.

- semi open impeller with back vanes for abrasive fluids
- free flow (recessed) impeller for fluids containing fibre

All three impeller versions can be combined with an inducer for low NPSHA applications.

Also a heat jacketed version exists for crystallizing fluids, e.g. Urea.

For high suction pressure applications the balance holes are seized individually to ensure a trouble-free operation.



The sense of rotation of the pump is clockwise (CW), looking from the coupling to the shaft end of the pump.

3.2 Nomenclature

Example:

ERP N 150-200 – X-Ind.

150 Discharge nozzle in mm

200 max. impeller size in mm

Ind Inducer

X: S high suction pressure
O semi open impeller
F free flow impeller

3.3 Design of major parts

3.3.1 Bearing housing

Made of carbon steel. It is flanged to the pump casing and provides enough space for mechanical seals according to API 682.

3.3.2 Pump casing

The pump casing is of volute type. For larger sizes double volute design is used to minimize radial forces. Back pull out design for easy maintenance, so the casing remains on its foundation in case of repair.

3.3.3 Hydraulics

3.3.3.1 Closed impeller

This is the standard version. Both, the impeller and pump casing have renewable front and back wear rings. Above a certain impeller size, the axial thrust is balanced by balancing holes.

3.3.3.2 Free flow impeller

The impeller has straight radial vanes and is mounted recessed in the pump casing. The axial thrust is balanced by back vanes.

3.3.3.3 Semi open impeller

The pump casing is equipped with a renewable wear plate. The axial thrust is balanced by back vanes.

3.3.3.4 Inducer

All different impellers can be optionally equipped with an inducer for low NPSHA applications.

3.3.3.5 Semi open impeller – low flow

The pump casing is equipped with a diffuser insert with an integrated wear plate. The axial thrust is balanced by back vanes.

3.3.4 Heat jacketed version

For crystallizing fluids, e.g. liquid sulphur, a urea solution heat jacketed version is available. Dependent on the pumped fluid the pump maybe fully (casing cover, etc.) or partially head jacketed (just the seal chamber).

3.3.4.1 Procedure of Preheating the pump before Start-up

Before priming the pump preheat it for at least one hour to avoid any distortion.

Note:

Refer to General Arrangement drawing for required steam pressure and flow rate.



Dry steam shall be used to avoid condensation and a condensate lock in the heat jacket.

3.4 Performance and operating limits



In the interest of operator safety the unit must not be operated above the nameplate conditions. Such operation could result in unit failure causing injury to operating personnel. Consult instruction book for correct operation and maintenance of the pump and its supporting components.

4.0 INSTALLATION



Equipment operated in hazardous locations must comply with the relevant explosion protection regulations, see section 1.6.4, *Products used in potentially explosive atmospheres*.

4.1 Location

The pump should be located to allow room for access, ventilation, maintenance and inspection with ample headroom for lifting and should be as close as practicable to the supply of liquid to be pumped.

Refer to the general arrangement drawing for the pump set.

4.2 Part Assemblies

The pumps are delivered completely mounted and prealigned with the motor. Also the shaft seal is in the correct position. Final alignment after complete installation is necessary. If drivers and/or seal systems are delivered separately, follow the assembly procedure in section 6.8.

4.3 Foundation

The foundation shall be located on a place that allows a minimum of pipe work and that is easily accessible for inspection during operation. According to the environment the foundation may consist of concrete or of steel. It must be rigid and heavy enough to absorb normal vibrations and shocks.

4.3.1 Horizontal alignment of the baseplate

Horizontal alignment is done with levelling screws. Use a spirit level for correct horizontal alignment of the baseplate.



The max. misalignment is 0.5 mm/m baseplate length.

4.3.2 Steel foundation

When the pump unit is mounted directly on structural steel frame, it shall be well supported by structural beams. It is recommended to check the natural frequency of the steel frame, because it shall not coincide with the pump speed. The exact horizontal alignment is very important!




Ensure that the base plate is leveled horizontally to 0.5 mm/m. To avoid any distortion of put shims under the base plate before bolting it down to the steel frame. Welding of the base plate to the steel frame is not recommended because of possible distortion of the same.

4.3.3 Concrete foundation

A concrete foundation must have an exact horizontal alignment and must be placed on solid ground. First a basic foundation shall be built with square shaped holes for embedding the foundation bolts. After putting the base plate into the foundation the proper alignment can be obtained by adjusting it with shims under the base plate. Now insert the foundation bolts and grout the space between the basic foundation and the base plate with grouting cement (refer to illustration)


It is very helpful to use a properly made and stable wooden frame around the base plate. So the grouting cement will not flow side. When the grouting is totally

set and hardened the foundation bolts shall be tightened in a firm and symmetrical way.

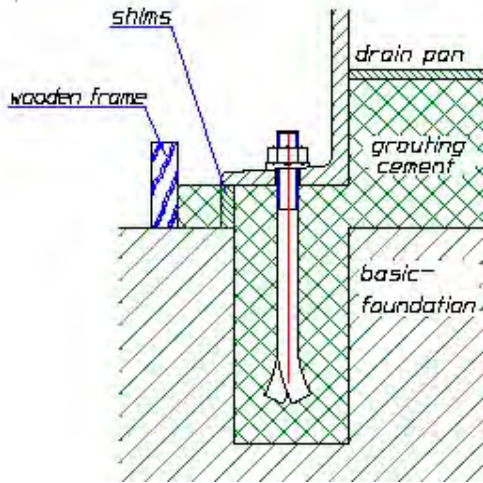

4.4 Initial alignment

The adjustment of motor and pump must be checked (if necessary, make a new adjustment) before first start up of the unit.

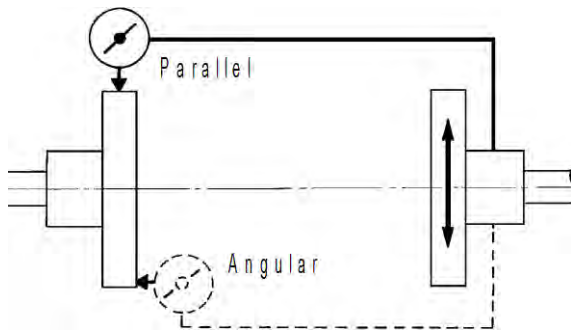

Ensure pump and driver are isolated electrically and the half couplings are disconnected. Align the motor to the pump, not the pump to the motor. Alignment of the motor is achieved by using the adjustment screws.

4.4.1 Permissible misalignment limits at working temperature


When checking parallel alignment, the total indicator read-out (TIR) shown is twice the value of the actual shaft displacement.



The pump is only pre-aligned! Carefully check or read just alignment before start of the unit. Take out the spacer of the coupling and check the alignment of shafts end of pump and driver. The maximum allowable angular offset should not exceed 0,05 degree, this means the alignment of the shaft ends should be 0,1 mm (0.004 in.). The maximum parallel offset should not exceed 0,05 mm (0.002 in) and the axially offset can be ± 1 mm (0.04 in.).




For more details refer to the manufacturer's instruction manual of coupling.

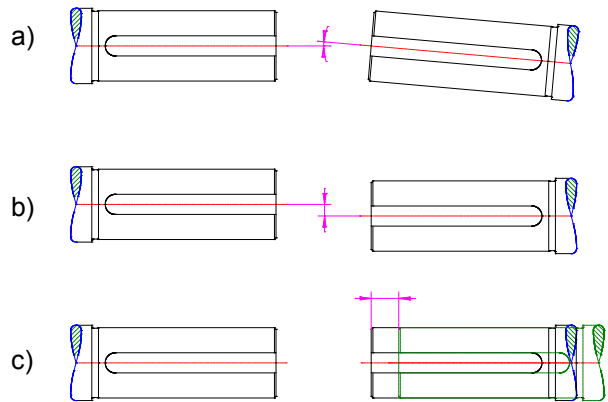

- a) Angular Offset: The median lines of shafts intersect half-way between the ends of the two shafts.
- b) Parallel Offset: The median lines run parallel. The maximum allowable parallel offset depends on the size of coupling and is indicated in the instruction manual of manufacturer of coupling
- c) Axially Offset: Another offset is the displacement of one or both of the shafts. A typical example is thermal expansion.

How the alignment of the coupling should be done you can see on the sketches and explanations below!

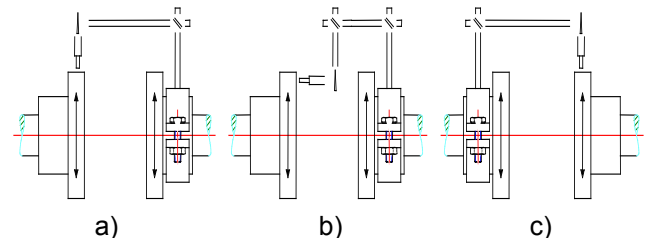

- a) Fix the dial gauge on the driven shaft and check the concentricity by turning of both hubs; correct it if necessary.
- b) Fix the dial gauge on one of the hubs and check the uniformity of the distance by turning of both hubs.; correct it if necessary.
- c) Fix the dial gauge on the driving shaft and check the concentricity by turning of both hubs; correct it if necessary.

If the pump is handling hot liquid, the alignment must be rechecked in warm condition of the unit.

4.5 Piping

4.5.1 General

Protective covers are fitted to the pipe connections to prevent foreign particles entering during transportation and installation. Ensure that these

Covers are removed from the pump before connecting any pipes.

Maximum forces and moments allowed on the pump flanges vary with the pump size and type. To minimize these forces and moments which may cause misalignment, hot bearings, worn couplings, vibration and a possible failure of the pump, the following points shall be strictly followed:

- a) Prevent excessive external pipe load.
- b) Do not connect piping by applying external force (use of wrenches, crane,...). Piping shall be aligned without residual stress.
- c) Do not mount expansion joints so that their force, due to internal pressure, acts on the pump flange.

Fitting an isolator and non-return valves can allow easier maintenance. Never throttle pump on suction side and never place a valve directly on the pump inlet nozzle.


A non-return valve shall be located in the discharge pipework to protect the pump from excessive back pressure and hence reverse rotation when the unit is stopped.

Piping and fittings shall be flushed before use. To avoid damages of the pump install a Y-strainer or a strainer of 40 mesh.

Piping for corrosive liquids shall be arranged to allow pump flushing before removal of a unit.

4.5.2 Inlet Piping Requirements *

Inlet flow disturbances, such as swirl, unbalance in the distribution of velocities and pressures, and sudden variations in velocity can be harmful to the hydraulic performance of a pump, its mechanical behavior, and its reliability.

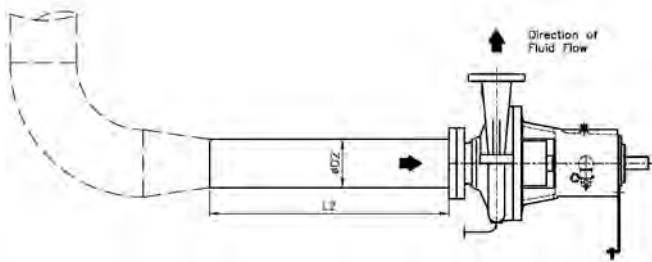

The minimum required straight pipe length (L2) before pump suction inlet is specified in Table 01. The straight pipe section is to be the same diameter as that of the pump suction nozzle.

Table 01

Fitting*	Number of pipe diameters (ØD2)	
	Long radius **	Short radius **
90° elbow	4	5
Reducing elbow with <30% area reduction	3	4
Reducing elbow with 30 to <50% area reduction	2	3
Reducing elbow with	0	1

>50% area reduction		
Reducers	Concentric	Eccentric
-) 1 pipe size reduction	0 (<10°)	0 (<20°)
-) 2 pipe size reductions	0 (<20°)	1 (<30°)
-) 3 pipe size reductions	1 (<20°)	2 (<30°)
-) 4 pipe size reductions	2 (<20°)	3 (<40°)
-) 5 pipe size reductions	3 (<30°)	4 (<40°)

* excerpt from ANSI/HI 9.6.6-2009


** according to ASME B16.9-2003

4.5.3 Vent

All ERPn pump casings provides self venting through top discharge nozzle arrangement. A small bore at the top of the seal chamber ensures venting of the same.

4.5.4 Drain

This connection is used for total drainage of the pump casing. A flanged drain is standard and can be optionally equipped with various kinds of valves. Refer to GA drawing for details of the drain connection.



By pumping toxic or explosive media, provide the necessary security actions, e.g. flushing with nitrogen.

4.6 Electrical connections




Electrical connections must be made by a qualified Electrician in accordance with the relevant local national and international regulations.



It is important to be aware of the EUROPEAN DIRECTIVE on hazardous areas where compliance with IEC60079-14 is an additional requirement for making electrical connections.



It is important to be aware of the EUROPEAN DIRECTIVE on electromagnetic compatibility when wiring up and installing equipment on site. Attention must be paid to ensure that the techniques used during wiring/installation do not increase electromagnetic emissions or decrease the electromagnetic immunity of the equipment, wiring or any connected devices. If in any doubt contact Flowserve for advice.



The motor must be wired up in accordance with the motor manufacturer's instructions (normally supplied within the terminal box) including any temperature, earth leakage, current and other protective devices

as appropriate. The identification nameplate should be checked to ensure the power supply is appropriate.



A device to provide emergency stopping must be fitted.

If not supplied pre-wired to the pump unit the controller/starter electrical details will also be supplied within the controller/starter.

For electrical details on pump sets with controllers see the separate wiring diagram.




See section 5.4, *Direction of rotation* before connecting the motor to the electrical supply.

4.7 Final shaft alignment check

After connecting piping to the pump, rotate the shaft several times by hand to ensure there is no seizure and all parts are free.

Recheck the coupling alignment, as previously described, to ensure no pipe strain. If pipe strain exists, correct piping.

5.0 COMMISSIONING START-UP, OPERATION AND SHUTDOWN



These operations must be carried out by fully qualified personnel.

5.1 Precommissioning procedure

- The bearing housing must be filled with the indicated oil. Check also the oil level.
- The pump must be completely filled with liquid to avoid running dry and to guarantee a correct performance of the pump.
- During filling the pump shall reach the specified temperature, so pumps for hot liquids ($T > 100\text{ }^{\circ}\text{C}$ ($212\text{ }^{\circ}\text{F}$)) shall be warmed up by preflushing.
- Check the sense of rotation of the pump (Coupling spacer dismantled).
Sense of rotation is clockwise viewed to the drive end of the pump.
- The shaft seal must be in correct axial position. Mounting plates of mechanical seal must be locked at the seal gland in open position. Drive-collar of the mechanical seal sleeve must be tightened.
- Check the readiness of all auxiliary systems (seal sys., lubrication sys.,...) for start up.
- All pipe work, including the internal and the auxiliary pipe work, must be connected correctly and must be absolutely tight. Check the tightness of all connections of the auxiliary pipe work. The suction valve must be open, the discharge valve shall be closed.

- Turn the pump by hand, if required with the help of a lever, to check the free rotation of the rotor. The rotor must turn uniformly and noiselessly. Some resistance may be felt due to friction in bearings and seals.
- Check the readiness of the driver for start up. Refer to the manual of the driver (preheating for explosion proof E-motor).

5.2 Pump Lubricants

5.2.1 Lubrication

The bearing housing shall be filled with proper lubricating oil prior to start up. If the pump will be started after a longer storage period, the bearing housing should be first flushed and cleaned with gasoline. It is not necessary to remove the preservation oil as this will mix up thoroughly with the lubrication oil.

Lubrication is provided by the pumping effect of the rotating ball bearings. Maintaining the correct oil level (middle of the oil sight glass) ensures that the lower ball bearing is covered with oil.

For recommended lubricating oils refer to the lubrication table 5.2.6

5.2.2 Oil change

After first start up, the oil shall be changed after 200 service hours.

Every further oil change shall take place after about 2000 service hours or at least every 6 month.

To change the oil use the following procedure:

- Remove the reservoir (for some type of oilers you must loose a fixing screw or lock nut, refer to section 5.2.3 *Oil level*).
- Open the oil drain on the bearing housing to remove the oil.
- Close the oil drain and fill in Oil through the oiler until the oil level reaches the bottom of the sight glass.
- Fill the reservoir and put it quickly to the body of the oiler. Observe the level in the reservoir. It will decrease until the required oil level is reached (middle of the sight glass). Ensure that enough oil remains in the reservoir.
- If necessary, the oil level can be adjusted by referring to section 5.2.3 *Oil level*.

5.2.3 Oil level

The correct oil level is in the middle of the oil sight glass and shall be checked when pump is not in operation. Periodically check if the lubricating oil is mixed with any condensed water. Careful opening of the oil drain during a stop of the pump will show any water.

Note:

Use a spirit level to check the horizontal alignment of the bearing housing.



A too high oil level will result in higher bearing temperatures and therefore poorer lubrication.

5.2.4 Oil quality

Oil used for lubrication should only be of high quality. The viscosity of the oil at working temperature must be at least 10 cSt. The pouring point of the oil must be in accordance with the lowest expected temperature of the bearing housing during a stop of the pump. For recommended lubricating oils refer to the lubrication table.

Having selected the corresponding oil quality the actual oil temperature at the bearing housing must be checked after two service hours of the pump. Considering this measured oil temperature the actual viscosity must be determined by using the data sheet of the oil, to verify the minimum required viscosity of 10 cSt. Do not forget, the oil temperature in the bearing itself is about 10 °C (Δ18 °F) higher than the oil temperature at the bearing housing. On the following table the oil viscosity is given at 40 °C (104 °F). Determining the correct lubricating oil one must take into consideration that all bearings will have higher temperatures during the first 20 service hours. In constant operation the bearing temperature will decrease about 10 °C (50 °F). The oil temperature shall be lower than 85 °C (185 °F) after this running-in time. The bearing outer race temperature should not exceed 95°C (204°F).

If the temperature is higher, the reason may be a wrong oil quality, wrong oil level or overload of the pump because of excessive wear.

If the humidity at the site is high, the roller bearings become easily rusty during stand still periods. To avoid that, we recommend to mix the lubricating oil with a corrosion inhibitor contact your lubrication oil supplier for proper additives inhibitors.

5.2.5 Oil quantity

Bearing size is shown on the name plate of the pump, and with this the correct thrust and line bearing frame

can be selected according to the following table.

Frame 1	Bearing housing [3200]	
	with Oiler [3855]	without Oiler [3855]
Oil quantity	0,42 l (14.2 Fl.oz.)	0,3 l (10.1 Fl.oz.)
Frame 2	Bearing housing [3200]	
	with Oiler [3855]	without Oiler [3855]
Oil quantity	0,62 l (21 Fl.oz.)	0,5 l (16.9 Fl.oz.)
Frame 3	Bearing housing [3200]	
	with Oiler [3855]	without Oiler [3855]
Oil quantity	0,82 l (27.7 Fl.oz.)	0,7 l (23.7 Fl.oz.)
Frame 4	Bearing housing [3200]	
	with Oiler [3855]	without Oiler [3855]
Oil quantity	1,42 l (48 Fl.oz.)	1,3 l (43.9 Fl.oz.)
Frame 5	Bearing housing [3200]	
	with Oiler [3855]	without Oiler [3855]
Oil quantity	1,82 l (61.5 Fl.oz.)	1,7 l (57.5 Fl.oz.)
Frame 6	Bearing housing [3200]	
	with Oiler [3855]	without Oiler [3855]
Oil quantity	2,12 l (71.7 Fl.oz.)	2 l (67.6 Fl.oz.)

5.2.6 Lubrication Table

Centrifugal Pump Lubrication	Oil	Oil Bath and Purge Oil Mist Lubrication			Pure Oil Mist Lubrication
	Lubrication service	Ball bearing			
	Type	Mineral Oil (Petroleum Based)			Mineral Oil (Petroleum Based)
	Ambient temperature °C (°F)	-20 to 35 (-4 to 95)		35 to 60 (95 to 140)	-5 to 60 (23 to 140)
	Oil temperature range* °C (°F)	-5 to 65 (23 to 149)	up to 85 (up to 185)	up to 100 (up to 212)	15 and above (59 and above)
	Viscosity mm ² /s 40°C [cSt]	32	46	68	100
	First Oil Change	200 hours	200 hours	200 hours	200 hours
	Further Oil Changes	2000 hours or at least every 6 months	2000 hours or at least every 6 months	2000 hours or at least every 6 months	2000 hours or at least every 6 months
Designation according to DIN51502 ISO VG	32	46	68	100	
Oil Companies and Lubricants	BP	BP Energol HL32 BP Energol HLP32	BP Energol HL46 BP Energol HLP46	BP Energol HL68 BP Energol HLP68	-
	CASTROL	Perfecto T32**	Perfecto T46**	Perfecto T68	-
	OMV	OMV turb HTU 32**	OMV turb HTU 46**	OMV turb HTU 68	-
	Aral	Aral Vitam GF 32	Aral Vitam GF 46	Aral Vitam GF 68	-
	Esso	NUTO H32	NUTO H46	NUTO H68	-
	LSC (for oil mist)	LSO 32 Synthetic oil	LSO 46 Synthetic oil	LSO 68 Synthetic oil	LSO 100 Synthetic oil
	Mobil	Mobil Nuto H32 Mobil DTE13M Mobil DTE24	Mobil Nuto H46 Mobil DTE15M Mobil DTE25	Mobil Nuto H68 Mobil DTE16M Mobil DTE26	-
	Shell	Shell Tellus 32 Shell Turbo T32**	Shell Tellus 46 Shell Turbo T46**	Shell Tellus 68 Shell Turbo T68	-
	Texaco	Rando HD 32	Rando HD 46	Rando HD 68	-
	Total	Azolla ZS32	Azolla ZS46	Azolla ZS68	-
	Wintershall (BASF Group)	Wiolan HN32 Wiolan HS32	Wiolan HN46 Wiolan HS46	Wiolan HN68 Wiolan HS68	-

* Note that it normally takes 2 hours for bearing temperature stabilize and the final temperature will depend on the ambient, r/min, pumpage temperature and pump size. Viscosity index shall be at least 95.

** For ambient temperature from -12°C (10 °F) upwards

For temperatures below -5 °C (-23 °F) use lubrication oil class SAE 5W-50 or API-SJ.

	Seal System / Pumped Liquid	Quench-Oil	General Features
Barrier/Buffer Fluid for Mech. Seal	Tandem Seal to -40 °C (-40 °F) Back to back Seal with gascoffer-dam Conventional back to back Seal	- Refined Hydraulic Oil - Synthetic Oil - Mixture of water / glykol ATTENTION: <u>Do not use Methanol</u>	appr. 10-15 cSt at 40°C (104 °F) below -40°C (-40 °F) Pourpoint vaporization above 80°C (176 °F)
	Tandem Seal to -60°C (-76 °F)	Ethanol/Propanol	

The sequence of the suppliers of the lubricants does not represent any indication of their superiority.

¹ Viscosity at 40 °C (104 °F) in cSt [mm²/s] DIN 51562

5.2.7 Lubrication

The bearing housing shall be filled with proper lubricating oil prior to start up. If the pump will be started after a longer storage period, the bearing housing should be first flushed and cleaned with gasoline. It is not necessary to remove the preservation oil as this will mix up thoroughly with the lubrication oil.

Lubrication is provided by the pumping effect of the rotating ball bearings. Maintaining the correct oil level (middle of the oil sight glass) ensures that the lower ball bearing is covered with oil.

For recommended lubricating oils refer to the lubrication table 5.2.6

5.2.8 Oil change

After first start up, the oil shall be changed after 200 service hours.

Every further oil change shall take place after about 2000 service hours or at least every 6 month.

To change the oil use the following procedure:

- a) Remove the reservoir (for some type of oilers you must loose a fixing screw or lock nut, refer to section 5.2.3 *Oil level*).
- b) Open the oil drain on the bearing housing to remove the oil.
- c) Close the oil drain and fill in Oil through the oiler until the oil level reaches the bottom of the sight glass.
- d) Fill the reservoir and put it quickly to the body of the oiler. Observe the level in the reservoir. It will decrease until the required oil level is reached (middle of the sight glass). Ensure that enough oil remains in the reservoir.
- e) If necessary, the oil level can be adjusted by referring to section 5.2.3 *Oil level*.

5.2.9 Oil level

The correct oil level is in the middle of the oil sight glass and shall be checked when pump is not in operation. Periodically check if the lubricating oil is mixed with any condensed water. Careful opening of the oil drain during a stop of the pump will show any water.


Note: Use a spirit level to check the horizontal alignment of the bearing housing.

A too high oil level will result in higher bearing temperatures and therefore poorer lubrication

5.2.9.1 Adjusting of ADAMS Constant Level Oiler

This design of Constant Oiler prevents the flooding of the bearing by means of the positive setting in the Oiler, thus maintaining the correct oil level at all times. When these Oilers are used on Ball or Roller bearings, the installation is the same as described below, excepting that the oil level in the bearing should never cover more than maximum above inside

diameter of the outer race at its lowest point.

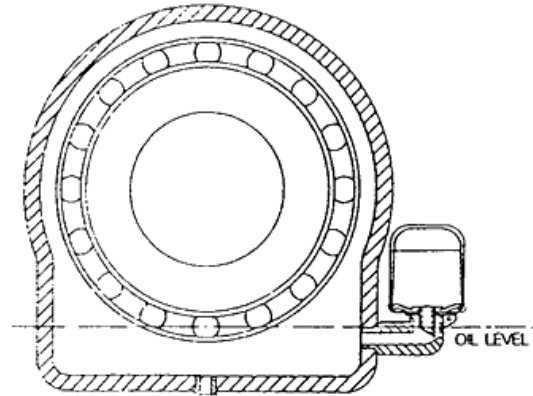

Note: If the pump is fitted with a Constant Level Oiler type "ADAMS", no adjustment of the oil level is possible.

5.2.10 Lubrication

The bearing housing shall be filled with proper lubricating oil prior to start up. If the pump will be started after a longer storage period, the bearing housing should be first flushed and cleaned with gasoline. It is not necessary to remove the preservation oil as this will mix up thoroughly with the lubrication oil.

Lubrication is provided by the pumping effect of the rotating ball bearings. Maintaining the correct oil level (middle of the oil sight glass) ensures that the lower ball bearing is covered with oil.

For recommended lubricating oils refer to the lubrication table 5.2.6

5.2.11 Oil change

After first start up, the oil shall be changed after 200 service hours.

Every further oil change shall take place after about 2000 service hours or at least every 6 month.

To change the oil use the following procedure:

- a) Remove the reservoir (for some type of oilers you must loose a fixing screw or lock nut, refer to section 5.2.3 *Oil level*).
- b) Open the oil drain on the bearing housing to remove the oil.
- c) Close the oil drain and fill in Oil through the oiler until the oil level reaches the bottom of the sight glass.
- d) Fill the reservoir and put it quickly to the body of the oiler. Observe the level in the reservoir. It will decrease until the required oil level is reached (middle of the sight glass). Ensure that enough oil remains in the reservoir.
- e) If necessary, the oil level can be adjusted by referring to section 5.2.3 *Oil level*.

5.2.12 Oil level


The correct oil level is in the middle of the oil sight glass and shall be checked when pump is not in operation. Periodically check if the lubricating oil is mixed with any condensed water. Careful opening of the oil drain during a stop of the pump will show any water.

Note: Use a spirit level to check the horizontal alignment of the bearing housing.

A too high oil level will result in higher bearing temperatures and therefore poorer lubrication

5.2.12.1 Adjusting of DENCO Constant Level Oiler

If the pump is fitted with a Constant Level Oiler type „DENCO“, the correct oil level has to be checked after fitting the pump! Dimension **a** is the distance from the centerline of the pump to the minimum oil level (marks at the bearing housing).

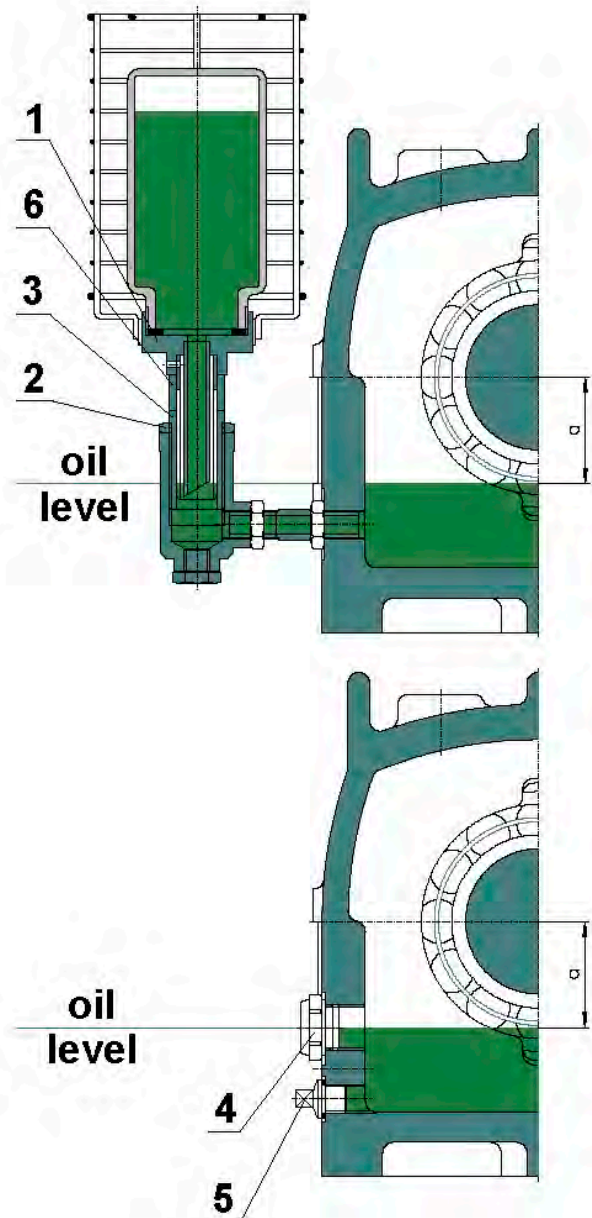

- 1 Denco Oiler
- 2 lock nut
- 3 adjusting sleeve
- 4 oil sight glass
- 5 oil drain
- 6 distance sleeve

- a) The oil level may be „fine tuned“ by turning the adjusting sleeve (3) and finally locked into position by tightening the lock nut (2). To replenish, the reservoir and adaptor (1) may be removed by sliding it out of the body, removing the adaptor and fill the reservoir. Fully reinserting the adaptor / reservoir into the body ensures the previously adjusted oil level is maintained. The oiler is equipped with an overflow tube to avoid a rise of the oil level. This is necessary to maintain a constant level in an oil bath lubrication system, where an oil mist is used as primary lubrication.

Note: The oiler is pre adjusted with the distance sleeve [6], therefore no adjustment is required anymore.

- b) Additionally you can check the correct oiler adjustment by an oil sight glass (correct oil level is the middle of the oil sight glass).

Size of Bearing Frame	radial roller bearing [3012]	thrust ball bearing [3013]	Dimension „a“ mm (in)
1	NU 207	7306 BECB (J),(M)	28 (1.1)
2	NU 309	7309 BECB (J),(M)	40 (1.58)
3	NU 311	7311 BECB (J),(M)	49 (1.93)
4	NU 313	7313 BECB (J),(M)	57 (2.24)
5	NU 315	7315 BECB (J),(M)	65 (2.56)
6	NU 317	7317 BECB (J),(M)	72 (2.84)

Note: Refer to nameplate or part list, to reading the correct frame size.

5.2.13 Lubrication

The bearing housing shall be filled with proper lubricating oil prior to start up. If the pump will be started after a longer storage period, the bearing housing should be first flushed and cleaned with gasoline. It is not necessary to remove the preservation oil as this will mix up thoroughly with the lubrication oil.

Lubrication is provided by the pumping effect of the rotating ball bearings. Maintaining the correct oil level (middle of the oil sight glass) ensures that the lower ball bearing is covered with oil.

For recommended lubricating oils refer to the lubrication table 5.2.6

5.2.14 Oil change

After first start up, the oil shall be changed after 200 service hours.

Every further oil change shall take place after about 2000 service hours or at least every 6 month.

To change the oil use the following procedure:

- a) Remove the reservoir (for some type of oilers you must loose a fixing screw or lock nut, refer to section 5.2.3 Oil level).
- b) Open the oil drain on the bearing housing to remove the oil.
- c) Close the oil drain and fill in Oil through the oiler until the oil level reaches the bottom of the sight glass.
- d) Fill the reservoir and put it quickly to the body of the oiler. Observe the level in the reservoir. It will decrease until the required oil level is reached (middle of the sight glass). Ensure that enough oil remains in the reservoir.
- e) If necessary, the oil level can be adjusted by referring to section 5.2.3 Oil level.

5.2.15 Oil level


The correct oil level is in the middle of the oil sight glass and shall be checked when pump is not in operation. Periodically check if the lubricating oil is mixed with any condensed water. Careful opening of the oil drain during a stop of the pump will show any water.

Note: Use a spirit level to check the horizontal alignment of the bearing housing.

A too high oil level will result in higher bearing temperatures and therefore poorer lubrication

5.2.15.1 Adjusting of TRICO Constant Level Oiler

If the pump is fitted with a Constant Level Oiler type „TRICO“, the correct oil level has to be checked after fitting the pump! Dimension a is the distance from the centerline of the pump to the minimum oil level (marks at the bearing housing).

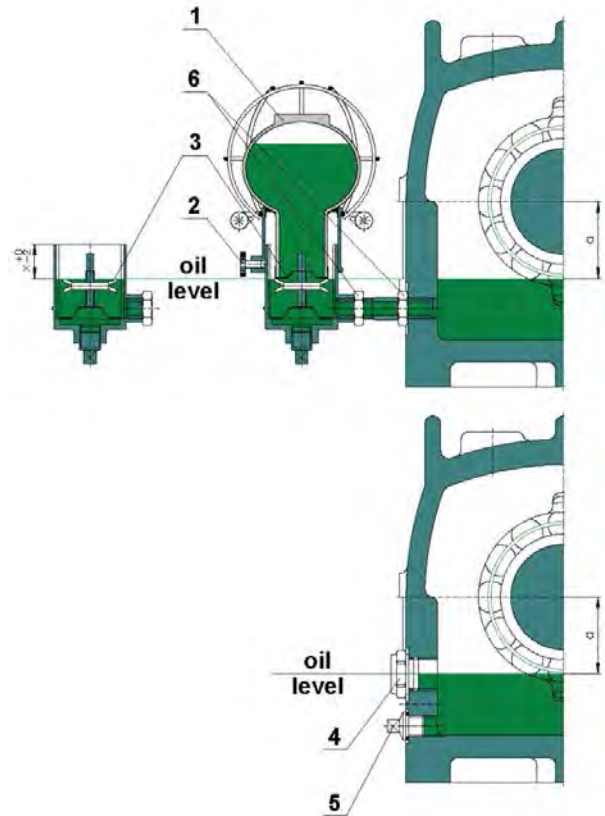

- 1 Trico-Oiler
- 2 fixing screw
- 3 leveling screw
- 4 oil sight glass
- 5 oil drain
- 6 Counter nut


- a) To check quickly the correct oiler adjustment, measure the dimension x from the oiler-rim to the minimum oil level (lower mark at the bearing housing). After that check the dimension from the oiler rim to the adjusting screw and compare it with the dimension x, if required turn the adjusting nut with tolerances of plus 0 mm and minus 2 mm (see figure), and fix it.
- b) Additionally you can check the correct oiler adjustment by an oil sight glass (minimum oil level is the middle of the oil sight glass).

Size of Bearing Frame	radial roller bearing [3012]	thrust ball bearing [3013]	Dimension „a“ mm (in)
1	NU 207	7306 BECB (J),(M)	28 (1.1)
2	NU 309	7309 BECB (J),(M)	40 (1.58)
3	NU 311	7311 BECB (J),(M)	49 (1.93)
4	NU 313	7313 BECB (J),(M)	57 (2.24)
5	NU 315	7315 BECB (J),(M)	65 (2.56)
6	NU 317	7317 BECB (J),(M)	72 (2.83)

Note: Refer to nameplate or part list, to reading the correct frame size.

5.2.16 Pure oil mist Lubrication

Pure oil mist system utilize a continuous oil mist flow through the bearing housing to deliver clean oil directly to the bearings and to maintain an outward flow of air from the housing to prevent the ingress of moisture and other corrosive contaminants. If the pump will be started after a longer storage period, the bearing housing should be first flushed and cleaned with gasoline. It is not necessary to remove the preservation oil.

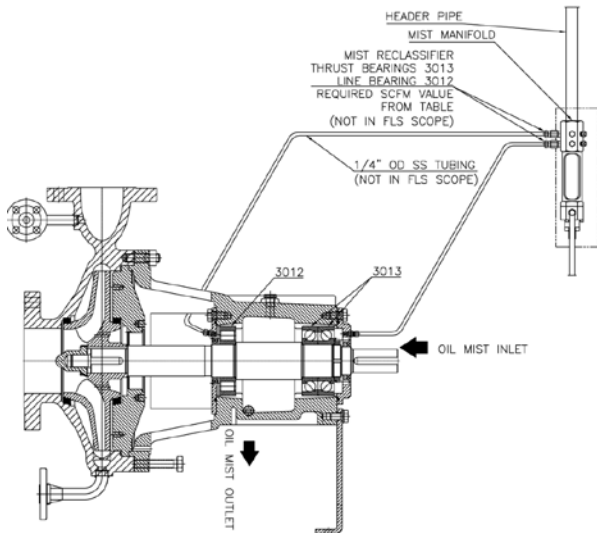

The supplied air must be dry and clean. The cleanness shall be < 5µm.

The bearing housing requires a minimum SCFM value as follows:

Frame	Bearing	Reclassifier at Manifold
1/2	3013	1 x 0.18 SCFM
1/2	3012	1 x 0.18 SCFM
3/4/5	3013	1 x 0.30 SCFM
3/4/5	3012	1 x 0.18 SCFM
6	3013	1 x 0.45 SCFM
6	3012	1 x 0.18 SCFM

CAUTION

The pressure in the bearing housing shall be 0,05 bar (0,74 psi) (20 inches of water column). A continuous lubrication should occur during operation and standby. Pre Lubrication shall be performed at least 1h before first start up.

Note: After start up the bearing temperature must be observed carefully. The temperature at the bearing housing should not exceed 85°C.

Note: Refer to the General Arrangement drawing regarding the connections for the oil mist lubrication.

5.2.17 Oil quality

Oil used for lubrication should only be of high quality. Flowserve recommend that quality synthetic oil are used where ambient temperatures fall below 4°C; the oil used must be paraffin free to prevent plugging of the reclassifier.

Oil with a viscosity class ISO VG100 shall be used, refer also to lubrication table 5.2.3.

5.2.18 Lubrication


The bearing housing shall be filled with proper lubricating oil prior to start up. If the pump will be started after a longer storage period, the bearing housing should be first flushed and cleaned with gasoline. It is not necessary to remove the preservation oil as this will mix up thoroughly with the lubrication oil.

Lubrication is provided by the pumping effect of the rotating ball bearings. Maintaining the correct oil level (middle of the oil sight glass) ensures that the lower ball bearing is covered with oil.

For recommended lubricating oils refer to the lubrication table 5.2.7

5.2.19 Purge oil mist Lubrication


Purge oil mist system utilize a continuous oil mist flow through the bearing housing to deliver clean oil directly to the bearing housing to maintain an outward flow of air from the housing to prevent the ingress of moisture and other corrosive contaminants.

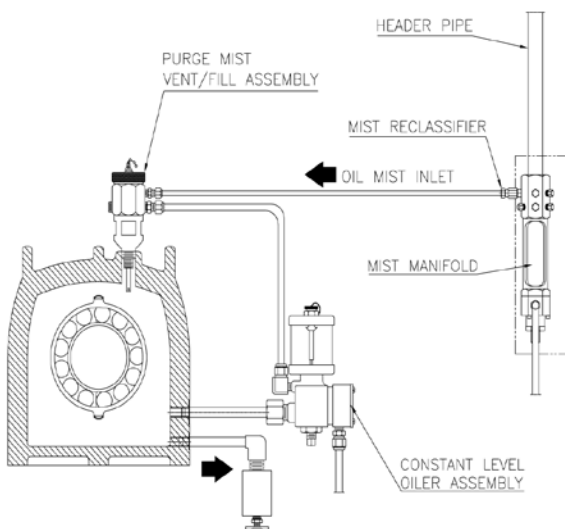


The supplied air must be dry and clean. The cleanness must be <math>< 5\mu\text{m}</math>.

For Purge Oil Mist Lubrication, a Reclassifier with a Value of 0.09 SCFM should be used at the Manifold.


The bearing housing is equipped with a Purge Mist Vent Fill Assembly at the top of the bearing housing and with a constant level oiler with included overflow device. The Overflow connection (3/8" tube) shall be connected to a collection container. Check overflow setting as per Oiler IOM.



The pressure in the bearing housing shall be 0,05 bar (0,74 psi) (20 inches of water column). A continuous oil mist lubrication should be occur during operation and stand by.



After start up the bearing temperature must be observed carefully. The temperature at the bearing housing should not exceed 85°C.



Refer to the GA-drawing regarding the connections to the supply systems.

5.2.20 Oil change

After first start up, the oil shall be changed after 200 service hours.

Every further oil change shall take place after about 2000 service hours or at least every 6 month.

To change the oil use the following procedure:

- a) Open the oil drain on the bearing housing to remove the oil.
- b) Close the oil drain and fill in Oil through the vent connection on the bearing cover until the oil level reaches the middle of the sight glass.
- c) Fill the reservoir of the constant level oiler.
- d) If necessary, the oil level can be adjusted by referring to section 5.2.4 *Oil level*.

5.2.21 Oil level

The correct oil level is in the middle of the oil sight glass and shall be checked when pump is not in operation. Periodically check if the lubricating oil is mixed with any condensed water. Careful opening of the oil drain during a stop of the pump will show any water.



During operation a small increase of the oil level can occur due to the oil mist supply.



A too high oil level will result in higher bearing temperatures and therefore poorer lubrication.

5.3 Impeller clearance

No axial adjustment of the rotor is necessary.

5.4 Direction of rotation



The sense of rotation of the pump is clockwise (CW); looking from the coupling to the shaft end of the pump.



The rotation of the driver shall be checked.

5.5 Guarding

Be sure that the coupling guard is mounted correctly at the baseplate prior to start up.

5.6 Priming and auxiliary supplies

The pump must be completely primed prior to start up.

- a) The pump casing is considered as self venting, so no vent connections are provided.
- b) Auxiliary systems, e.g. barrier /buffer fluid systems, cooling circuits, shall be filled according to the user instructions.

5.7 Starting the pump

- a) Start the driver according to the specification. (Refer to driver IOM).

Note:

Pumps are usually started against closed discharge valve.

- b) Check the discharge and suction pressure gauge to verify the pumps delivered head. Open the discharge valve slowly, until the pump reaches the specified operation point. The pump must operate smoothly, and the vibration must be below 3 mm/s (0.12 in./sec) (API 610 vibration limits).



The discharge valve must be opened within 30 sec. after start up. Longer operation against closed discharge valve will damage the pump. If a minimum flow valve is installed, take pressure gauge readings to verify the correct operation.

Note:

If the backpressure of the discharge pipe is sufficient, pumps can be started against open valve.



Ensure that your driver is capable deliver the higher torque required by starting against open valve.



To prevent the pump from reverse rotation after shut down, the installation of a check valve is recommended.

Although the pump is not affected by reverse rotation because of special coupling design, it can be an issue with the driver.

Check the discharge and suction pressure gauge to verify the pumps delivered head.

The pump must operate smoothly, and the vibration must be below 3 mm/s (0.12 in./sec) (API 610 vibration limits).

If a minimum flow valve is installed, take pressure gauge readings to verify the correct operation.

- c) Check the pipe system against any leakage.
- d) Check the mechanical seal against any leakage.

Note:

Right after start up a minor leakage of the mechanical seal is quite normal. Normally this leakage disappears after few minutes of operation.

5.8 Operation

- a) Verify that the pump is operating within the specified limits, min/max flow, pressure, temperature, vibration, power
- b) The bearing housing temperature shall not exceed 80 °C (176 °F). If higher bearing temperature are observed, check the viscosity grade of the used lubrication oil.



The minimum viscosity is 10 cSt at the expected oil temperature.

(Oil temperature = bearing gland temperature + 10 °C (50 °F))

- c) From time to time check the pump shaft seal. Leakage of 10 - 20 drops per hour is also with a mechanical shaft seal unavoidable.
- d) Observe the power consumption of the pump to detect excessive wear.

5.9 Stopping and Shutdown

- a) Close the outlet valve, but ensure that the pump runs in this condition for no more than a few seconds.
- b) Stop the pump.
- c) Switch off flushing and/or cooling/ heating liquid supplies at a time appropriate to the process.
- d) For prolonged shut-downs and especially when ambient temperatures are likely to drop below freezing point, the pump and any cooling and flushing arrangements must be drained or otherwise protected.

Note:

For automatic start/stop operation of the pump, ensure that all steps described in chapter 5.6, 5.7, 5.8 and 5.9 are implemented in the control logic.

5.10 Hydraulic, mechanical and electrical duty

This product has been supplied to meet the performance specifications of your purchase order, however it is understood that during the life of the product these may change. The following notes will help the user to decide how to evaluate the implications of any change. If in doubt contact your nearest Flowserve office.

5.10.1 Specific gravity (SG)

Pump capacity and total head in meters (feet) do not change with SG, however pressure displayed on a pressure gauge is directly proportional to SG. Power absorbed is also directly proportional to SG.

It is therefore important to check that any change in SG will not overload the pump driver or over-pressurize the pump.

5.10.2 Viscosity

For a given flow rate the total head reduces with increased viscosity and increases with reduced viscosity. Also for a given flow rate the power absorbed increases with increased viscosity, and reduces with reduced viscosity. It is important that checks are made with your nearest Flowserve office if changes in viscosity are planned.

5.10.3 Pump speed

Changing pump speed effects flow, total head, power absorbed, NPSHR, noise and vibration. Flow varies in direct proportion to pump speed. Head varies as speed ratio squared. Power varies as speed ratio cubed. If increasing speed it is important therefore to ensure the maximum pump working pressure is not exceeded, the driver is not overloaded, NPSHA > NPSHR, and that noise and vibration are within local requirements and regulations.

5.10.4 Net positive suction head (NPSHA)

NPSH available (NPSHA.) is a measure of the energy available in the pumped liquid, above its vapour pressure, at the pump suction branch. NPSH required (NPSHR.) - is a measure of the energy required in the pumped liquid, above its vapour pressure, to prevent the pump from cavitating. It is important that NPSHA > NPSHR. The margin between NPSHA > NPSHR should be as large as possible. If any change in NPSHA is proposed, ensure these margins are not significantly eroded. Refer to the pump performance curve to determine exact requirements particularly if flow has changed. If in doubt please consult your nearest Flowserve office for advice and details of the minimum allowable margin for your application.

5.10.5 Pumped flow

Flow must not fall outside the minimum and maximum continuous safe flow shown on the pump performance curve and/or data sheet.

6.0 MAINTENANCE

6.1 General



It is the plant operator's responsibility to ensure that all maintenance, inspection and assembly work is carried out by authorized and qualified personnel who have adequately familiarized themselves with the subject matter by studying this manual in detail.
(See also section 1.6.2.)

Any work on the machine must be performed when it is at a standstill. It is imperative that the procedure

for shutting down the machine is followed, as described in section 5.9.

On completion of work all guards and safety devices must be re-installed and made operative again.

Before restarting the machine, the relevant instructions listed in section 5, *Commissioning, start up, operation and shut down* must be observed.

Oil and grease leaks may make the ground slippery. Machine maintenance must always begin and finish by cleaning the ground and the exterior of the machine.

If platforms, stairs and guard rails are required for maintenance, they must be placed for easy access to areas where maintenance and inspection are to be carried out. The positioning of these accessories must not limit access or hinder the lifting of the part to be serviced.

When air or compressed inert gas is used in the maintenance process, the operator and anyone in the vicinity must be careful and have the appropriate protection.

Do not spray air or compressed inert gas on skin.

Do not direct an air or gas jet towards other people.

Never use air or compressed inert gas to clean clothes.

Before working on the pump, take measures to prevent an uncontrolled start. Put a warning board on the starting device with the words:
"Machine under repair: do not start".

With electric drive equipment, lock the main switch open and withdraw any fuses. Put a warning board on the fuse box or main switch with the words:
"Machine under repair: do not connect".

Never clean equipment with inflammable solvents or carbon tetrachloride. Protect yourself against toxic fumes when using cleaning agents.

6.2 Maintenance schedule



It is recommended that a maintenance plan and schedule is adopted, in line with these User Instructions, to include the following:

- a) Any auxiliary systems installed must be monitored, if necessary, to ensure they function correctly.
- b) Gland packings must be adjusted correctly to give visible leakage and concentric alignment of the gland follower to prevent excessive temperature of the packing or follower.


- c) Check for any leaks from gaskets and seals. The correct functioning of the shaft seal must be checked regularly.
- d) Check bearing lubricant level, and if the hours run show a lubricant change is required.
- e) Check that the duty condition is in the safe operating range for the pump.
- f) Check vibration, noise level and surface temperature at the bearings to confirm satisfactory operation.
- g) Check dirt and dust is removed from areas around close clearances, bearing housings and motors.
- h) Check coupling alignment and re-align if necessary.

Our specialist service personnel can help with preventative maintenance records and provide condition monitoring for temperature and vibration to identify the onset of potential problems.

If any problems are found the following sequence of actions should take place:

- a) Refer to section 8, *Faults; causes and remedies*, for fault diagnosis.
- b) Ensure equipment complies with the recommendations in this manual.
- c) Contact Flowserve if the problem persists.


6.2.1 Routine Inspection (daily/weekly)



The following checks should be made and the appropriate action taken to remedy any deviations.

- a) Check operating behavior; ensure noise, vibration and bearing temperatures are normal.
- b) Check that there are no abnormal fluid or lubricant leaks (static and dynamic seals) and that any sealant systems (if fitted) are full and operating normally.
- c) Check that shaft seal leaks are within acceptable limits.
- d) Check the level and condition of lubrication oil. On grease lubricated pumps, check running hours since last recharge of grease or complete grease change.
- e) Check any auxiliary supplies eg. heating/cooling (if fitted) are operating correctly.
- f) Refer to the manuals of any associated equipment if routine checks needed.

6.2.2 Periodic Inspection (every 6 Month)



- a) Check foundation bolts for security of attachment and corrosion.
- b) Check pump operation hours to determine if bearing lubricant shall be changed.
- c) The coupling should be checked for correct alignment and worn driving elements.



Refer to the manuals of any associated equipment for periodic checks needed.

6.3 Spare parts

6.3.1 Ordering of spares

When ordering spare parts we need the following information:

1. pump type and pump size
2. serial number of the pump
3. number of the required spare parts
4. reference number and name of the part as listed in the part list or in the sectional drawing

Example: for ERPn pump:

ERPn 150-200, serial number G202222/01
1 piece impeller Pos. 2200

The serial number of each pump is indicated on the name plate. If the material should be changed from the original delivered one, additionally indicate the exact material specification. If ordered impellers shall have smaller or larger outer diameter, indicate also with your order. Without a special remark the spare impellers will be delivered with the diameter of the original impellers.

If you need the wear rings oversized or undersized, please indicate, otherwise the wear rings will be delivered with standard size.

To ensure continuous satisfactory operation, replacement parts to the original design specification should be obtained from Flowserve.

Any change to the original design specification (modification or use of a non-standard parts) will invalidate the pump's safety certification.

6.3.2 Storage of spares

Spares should be stored in a clean dry area away from vibration. Inspection and retreatment of metallic surfaces (if necessary) with preservative is recommended at a 6 monthly interval.

6.4 Recommended spares

Part	Spares Recommended						
	Start up			Normal Maintenance			
No. of identical pumps	1 - 3	4 - 6	7+	1 - 3	4 - 6	7 - 9	10+
Case							1
Head (case cover and stuffing box)							1
Bearing housing							1
Shaft (w/key)				1	1	2	1
Impeller				1	1	2	3
Wear rings (set)	1	1	1	1	1	2	3
Bearings complete (antifriction, radial)	1	2	3	1	2	3	3
Bearings complete (antifriction, thrust)	1	2	3	1	2	3	3
Mechanical seal complete (Cartridge)	1	2	3	1	2	3	3
Shaft sleeve and stage bushing (set)	1	2	3	1	2	3	3
Gaskets, O-rings (set)	1	2	3	1	2	3	3

6.5 Tightening torque & tightening sequence

6.5.1 Tightening torque

Tightening Torque M _A Nm (lbf.ft)										
	Carbon Steel									
Size of Screw	A193 B7M, A320 L7M (NACE)		A193 B7, A320 L7, 8.8		3.6		4.6		10.9	
	[Nm]	[lbf.ft]	[Nm]	[lbf.ft]	[Nm]	[lbf.ft]	[Nm]	[lbf.ft]	[Nm]	[lbf.ft]
M4	4.2	(3.1)	3	(2.2)	0.8	(0.6)	1.1	(0.8)	4.6	(3.4)
M5	8.3	(6.1)	5.9	(4.4)	1.6	(1.2)	2.2	(1.6)	8.6	(6.3)
M6	14.2	(10.5)	10.1	(7.4)	2.8	(2.1)	3.7	(2.7)	14.9	(11)
M8	35	(26)	24.6	(18.1)	6.8	(5)	9.1	(6.7)	36	(27)
M10	68	(50)	48	(35)	13.7	(10.1)	18.3	(13)	71	(52)
M12	118	(87)	84	(62)	23	(17)	31	(23)	123	(91)
M14	187	(138)	133	(98)	37	(27)	50	(37)	195	(144)
M16	290	(214)	206	(152)	57	(42)	76	(56)	302	(223)
M18	335	(247)	295	(218)	80	(59)	106	(78)	421	(311)
M20	472	(348)	415	(306)	112	(83)	150	(111)	592	(437)
M22	644	(475)	567	(418)	151	(111)	202	(149)	807	(595)
M24	811	(598)	714	(527)	193	(142)	257	(190)	1017	(750)
M27	1193	(880)	1050	(774)	284	(209)	379	(280)	1496	(1103)
M30	1614	(1190)	1420	(1047)	386	(285)	515	(380)	2033	(1500)
M33	2191	(1616)	1928	(1422)	523	(386)	697	(514)	2747	(2026)
M36	2820	(2080)	2482	(1831)	672	(496)	897	(662)	3535	(2607)
M39	3645	(2689)	3208	(2366)	870	(642)	1160	(856)	4569	(3370)
M42	3920	(2891)	3980	(2936)	1146	(845)	1447	(1067)	5670	(4182)
M45	4875	(3596)	4950	(3651)	1425	(1051)	1800	(1328)	7050	(5200)
M48	5899	(4351)	5990	(4418)	1724	(1272)	2178	(1606)	8530	(6292)
M64	14083	(10388)	14300	(10548)	4117	(3037)	5201	(3836)	20370	(15025)
M68	16998	(12538)	17260	(12731)	4969	(3665)	6277	(4630)	24580	(18130)
M76			25230	(18610)	8270	(6100)				

Tightening Torque M _A Nm (lbf.ft)											
	Duplex SS		Austenitic SS					other alloys			
Size of Screw	S32760, S31803, 1.4462		A193 B8M Cl2		A4-70, A2-70		A193 B8/B8M, A193 B8MA (NACE) A2-50, A4-50		N08825		
	[Nm]	[lbf.ft]	[Nm]	[lbf.ft]	[Nm]	[lbf.ft]	[Nm]	[lbf.ft]	[Nm]	[lbf.ft]	
M4	2.1	(1.5)	3.2	(2.4)	1.9	(1.4)	0.9	(0.7)	1.1	(0.8)	
M5	4.1	(3)	6.4	(4.7)	3.6	(2.7)	1.6	(1.2)	2.2	(1.6)	
M6	7.1	(5.2)	10.9	(8)	6.3	(4.6)	2.9	(2.1)	3.7	(2.7)	
M8	17	(12.5)	27	(19.9)	15	(11.2)	7.1	(5.2)	9.1	(6.7)	

M10	34	(25)	52	(38)	30	(22)	14	(10.3)	18.3	(13)
M12	59	(44)	91	(67)	51	(38)	24	(17.7)	31	(23)
M14	94	(69)	143	(105)	82	(60)	38	(28)	50	(37)
M16	145	(107)	222	(164)	126	(93)	58	(43)	76	(56)
M18	201	(148)	308	(227)	176	(130)	82	(60)	106	(78)
M20	283	(209)	434	(320)	247	(182)	115	(85)	150	(111)
M22	387	(285)	473	(349)	337	(249)	157	(116)	202	(149)
M24	487	(359)	595	(439)	426	(314)	198	(146)	257	(190)
M27	716	(528)	716	(528)	602	(444)	292	(215)	379	(280)
M30	968	(714)	968	(714)	817	(603)	397	(293)	515	(380)
M33	1315	(970)	1008	(744)	1112	(820)	536	(395)	697	(514)
M36	1692	(1248)	1297	(957)	1428	(1053)	690	(509)	897	(662)
M39	2187	(1613)			1849	(1364)	890	(656)	1160	(856)
M42	2714	(2002)			2287	(1687)	1067	(787)	1447	(1067)
M45	3375	(2489)							1800	(1328)
M48	4084	(3012)							2178	(1606)
M64	9750	(7192)							5201	(3836)
M68	11768	(8680)							6277	(4630)
M76										







Above mentioned torques are for all screwed unions, which works under dynamical load. For all other connections you can use a corresponding smaller torque. Anchor bolts are usually made of 4.6 material. Tightening torques indicated in above table shall not be exceeded.

6.5.2 Tightening sequence

Stage 1: Torque the bolts, following the illustrated sequence below, using 30% of the tightening torque indicated in chapter 6.5.1.

Stage 2: Torque the bolts, following the illustrated sequence below, using 60% of the tightening torque indicated in chapter 6.5.1.

Stage 3: Torque the bolts, following the illustrated sequence below, using 100% of the tightening torque indicated in chapter 6.5.1.

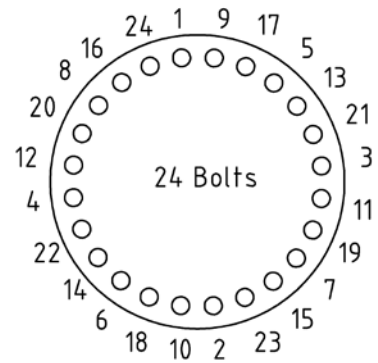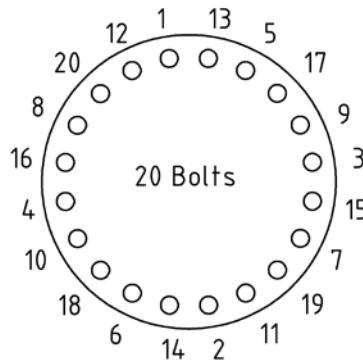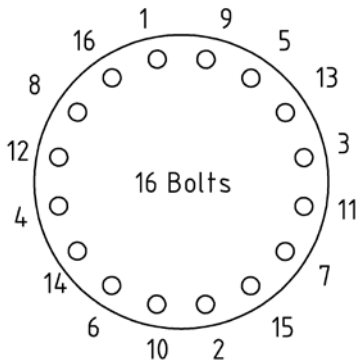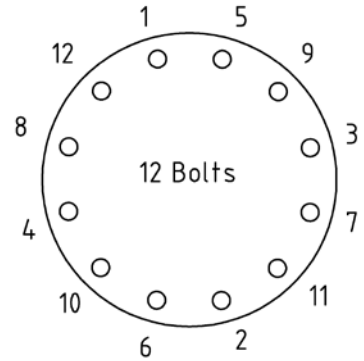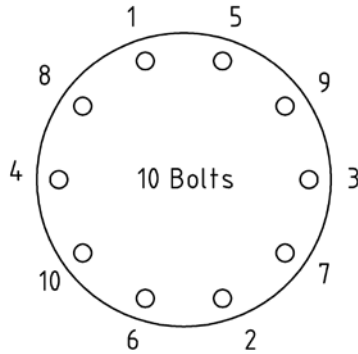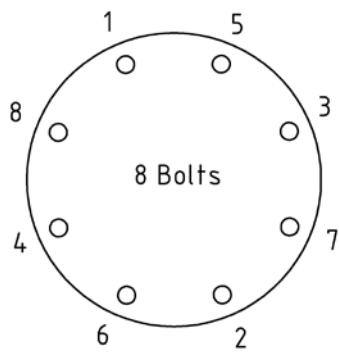

6.6 Setting impeller clearance

No axial adjustment of the rotor is necessary.

6.7 Disassembly



Refer to section 1.6, *Safety*, before dismantling the pump.




Before dismantling the pump for overhaul, ensure genuine Flowserve replacement parts are available.


Refer to sectional drawings for part numbers and identification.

6.7.1 Dismantling of pump

- 1) Completely drain the pump by using the drain connection. By pumping explosive or toxic media, flush your system with Nitrogen.
- 2) Remove coupling guard and uncouple the pump from the motor. Pull off the coupling hub from the pump shaft [2100] and take out the key [6700.2].




Ensure that the motor is locked against start up.




If applied pull off the vane.

- 3) Drain the oil from the bearing housing, using the plug [6569.1]. If required disconnect all auxiliary pipings and auxiliary devices like vibration probes, temperature probes, ect.




For heat jacketed version: Ensure that the steam pipes at the casing cover with heat jacket must be drained (condensate).

- 4) Loose hex nuts [6581.1] at the pump casing and the hex nuts of the support foot [3134] for the baseplate. Now you can pull out the complete pump assembly from its casing.




Larger pumps are equipped with hexagon head bolt [6577.1] to pull out the pump assembly.

- 5) Secure the mechanical seal by putting the mounting plates into the groove of the shaft sleeve. Loose the grub screws, and disconnect the seal piping.



Drain the seal system, if applicable.

- 6) Take out the casing gasket [4590.1].




The casing gasket [4590.1] shall be renewed after each disassembly.

- 7) Unsecure clamping ring [2542] and loose impeller nut [2912] (right hand thread).



Pumps having a screwed inducer have no impeller nut. Therefore loose the inducer. Pumps having a slipped on inducer, the impeller nut [2912] must be loosed.

- 8) Pull off the impeller [2200] from its shaft [2100]. Remove key [6700.1].



By pumps having a slipped on inducer, the inducer must be pulled of first.

- 9) Pull off casing cover [1221] including mechanical seal cartridge from the shaft [2100].




There are two threads for using eye bolts to lift the casing cover by crane.

- 10) Loose hex nuts [6581.2] to remove the mechanical seal cartridge.



The gasket [4590.2] shall be renewed after each disassembly.

- 11) If provided, loose the grub screw [6814.3] and pull off the flinger [2541] from the shaft [2100].



No flinger is provided for dual mechanical seal cartridge.

6.7.2 Dismantling of the bearing housing

- 1) Loose hexagon head bolt [6577.3] from radial bearing cover [3260.1] and pull it including O-ring [4610] and labyrinth ring [4330.1] from the bearing housing [3200].
- 2) Loose hexagon head bolt [6577.3] from bearing cover [3260.2] and pull it including O-ring [4610] and labyrinth ring [4330.2] from the bearing housing [3200].
- 3) Push shaft [2100] with mounted inner race of radial roller bearing [3012], thrust ball bearings [3013] into direction of the coupling hub. Now the shaft can be removed from the bearing housing [3200].
- 4) Unsecure lockwasher [6541] and bearing lock nut [3712].
- 5) Pull off the thrust ball bearings [3013] and inner race of radial roller bearing [3012] by using an applicable puller.
- 6) Pull out the radial roller bearing [3012] from the bearing housing [3200].

Frame	Thrust bearing	Line bearing
1	7306 BECB (J),(M)	NU 207
2	7309 BECB (J),(M)	NU 309
3	7311 BECB (J),(M)	NU 311
4	7313 BECB (J),(M)	NU 313
5	7315 BECB (J),(M)	NU 315
6	7317 BECB (J),(M)	NU 317

6.8 Examination of parts

- 1) Check the casing wear ring and the impeller wear ring against any wear. The diametrical clearance between the rings must not exceed twice the value in new condition. Pumps with semi open impeller have no wear rings. Check the wear plate and the impeller [2200] against any wear. Semi open and free flow impellers have back vanes, which shall be checked against any wear.
- 2) Check all parts against corrosion and erosion.
- 3) Carefully check the coupling against any wear.
- 4) Rotate the bearings by hand, to check against abnormal sound. Check the bearing cages against any wear and the outer and inner race against running marks. Check the runout of the shafts. TIR (Total Indicated Runout) shall not exceed 0.04 mm/m (0.0005 in./ft) of length. TIR shall not exceed 0.08 mm (0.003 in.) over total shaft length.

6.8.1 Gap at closed impeller – ERP N

The radial gap between casing wear ring [1500] and impeller wear ring [2300] in assembled condition is:

	Pump size	Wear ring diameter mm (in.)	Radial clearances mm (in.)
FRAME 1	25-125	78 (3.1)	0.3 (0.012)
	25-160	78 (3.1)	0.3 (0.012)
	25-200	78 (3.1)	0.3 (0.012)
	32-125	78 (3.1)	0.3 (0.012)
	32-160	78 (3.1)	0.3 (0.012)
	32-200	78 (3.1)	0.3 (0.012)
	40-125	90 (3.5)	0.3 (0.012)
	40-160	90 (3.5)	0.3 (0.012)
	40-200	105 (4.1)	0.3 (0.012)
	50-125	95 (3.7)	0.3 (0.012)
	50-160	105 (4.1)	0.3 (0.012)
	50-200	105 (4.1)	0.3 (0.012)
FRAME 2	65-125	114 (4.5)	0.3 (0.012)
	32-250	90 (3.5)	0.3 (0.012)
	40-250	105 (4.1)	0.3 (0.012)
	50-250	105 (4.1)	0.3 (0.012)
	65-160	138 (5.4)	0.35 (0.014)
	65-200	138 (5.4)	0.35 (0.014)
	65-250	138 (5.4)	0.35 (0.014)
	80-160	138 (5.4)	0.35 (0.014)
	80-200	169 (6.7)	0.35 (0.014)
	100-200	169 (6.7)	0.35 (0.014)
FRAME 3	125-204	176 (6.9)	0.25 (0.010)
	40-315	105 (4.1)	0.3 (0.012)
	50-315	124 (4.9)	0.35 (0.014)
	65-315	138 (5.4)	0.35 (0.014)
	80-250	138 (5.4)	0.35 (0.014)
	80-315	169 (6.7)	0.35 (0.014)
	80-404	169 (6.7)	0.35 (0.014)
	100-250	169 (6.7)	0.35 (0.014)
	100-404	169 (6.7)	0.35 (0.014)
	125-254	179 (7.1)	0.35 (0.014)
	125-319	184 (7.2)	0.35 (0.014)
	125-404	184 (7.2)	0.35 (0.014)
	150-250	225 (8.9)	0.4 (0.016)

	150-254	225 (8.9)	0.4 (0.016)
	150-319	225 (8.9)	0.4 (0.016)
	200-254	242 (9.5)	0.4 (0.016)
FRAME 4	50-380	124 (4.9)	0.35 (0.014)
	65-400	138 (5.4)	0.35 (0.014)
	80-400	169 (6.7)	0.35 (0.014)
	100-315	169 (6.7)	0.35 (0.014)
	150-315	225 (8.9)	0.4 (0.016)
	150-404	225 (8.9)	0.4 (0.016)
	200-250	235 (9.3)	0.4 (0.016)
	200-319	256 (10.1)	0.4 (0.016)
	200-404	256 (10.1)	0.4 (0.016)
	250-319	300 (11.8)	0.4 (0.016)
FRAME 5	100-400	184 (7.2)	0.35 (0.014)
	150-400	225 (8.9)	0.4 (0.016)
	150-504	225 (8.9)	0.4 (0.016)
	200-315	235 (9.3)	0.4 (0.016)
	200-400	235 (9.3)	0.4 (0.016)
	200-504	256 (10.1)	0.4 (0.016)
	250-404	265 (10.4)	0.4 (0.016)
FR. 6	250-504	300 (11.8)	0.4 (0.016)
	150-604	225 (8.9)	0.4 (0.016)
	200-604	256 (10.1)	0.4 (0.016)
	250-604	300 (11.8)	0.4 (0.016)

Note:

Gaps apply approximately for wear rings in all materials and in assembled condition.

6.8.2 Gap at free flow impeller – ERP N – F

Diametrical gap between vane on the back of impeller [2200] and casing cover [1221] in assembled condition: 1 mm [0.04 in.].
 Diametrical gap between vane on the front of impeller [2200] and pump casing [1110] depends on the width of pump casing spiral as impeller is located outside and a quarter of width of impeller outlet extend into spiral at most.

6.8.3 Gap at open impeller – ERP N – O

Diametrical gap between vane on the back of impeller [2200] and casing cover [1221] in assembled condition: 1 mm [0.04 in.].
 Diametrical gap between vane on the front of impeller and wear plate [1915] in assembled condition: 1mm [0.04 in.].

6.9 Assembly

To assemble the pump consult the sectional drawings.

Ensure threads, gasket and O-ring mating faces are clean. Apply thread sealant to non-face sealing pipe thread fittings.

6.9.1 Assembly of pump

- 1) Put the gasket [4590.2] into the foreseen groove of the casing cover [1221] and mount the

mechanical seal cartridge to the casing cover and tight the hex nuts [6581.2].

Note: The gasket [4590.2] shall be renewed after each disassembly.

- 2) Slip on the casing cover [1221] with already mounted mechanical seal cartridge to the pump shaft [2100], which is already completely assembled with the bearing housing. (refer to section 6.9.2 *Assembly of the bearing housing.*)
- 3) Insert key [6700.1] into the keyway and slip on impeller [2200] and clamping ring [2542] to the shaft [2100]. Fasten the impeller with the impeller nut [2912] and secure it with the clamping ring [2542].

Note: Pumps having a screwed inducer have no impeller nut. Therefore fasten the impeller with the inducer. Pumps having a slipped on inducer are fastened by using the impeller nut [2912].

- 4) Put gasket [4590.1] into the foreseen groove of pump casing [1110]. Now lift the complete "back-pull out" assembly by crane and push it into the pump casing [1110].

Note: The casing gasket [4590.1] shall be renewed after each disassembly.

- 5) Fasten crosswise the hex nuts [6581.1] of studs [6572.1].

Note: For heat jacketed version: Ensure that the steam pipes are properly tightened so that no steam leakage occurs. Steam data like pressure, flow and temperature are shown in the GA-drawing.

- 6) For further pump assembly follow the reverse disassembly procedure.

6.9.2 Assembly of the bearing housing

- 1) Heat up the thrust ball bearings [3013] and push it on the shaft [2100] as shown in the section drawing. Put on lockwasher [6541] and fix the thrust bearing with the bearing lock nut [3712] and secure it by the lockwasher.
- 2) Heat up the inner race of the radial roller bearing [3012] and push it on the shaft [2100].
- 3) Push radial roller bearing [3012] without inner race into the bearing housing [3200]. Mount radial bearing cover [3260.1] including O-ring [4610] by using hexagon head bolt [6577.3].
- 4) Insert shaft [2100] with already mounted bearings into prepared bearing housing [3200]. Mount thrust bearing cover [3260.2] including O-ring [4610] by using hexagon head bolt [6577.3].
- 5) Put in the labyrinth ring [4330.1] into the radial roller bearing [3012] and labyrinth ring [4330.2] into thrust bearing cover [3260.2].

Note: Take care that the oil return slots of the bearing covers are at the bottom and one slot of the labyrinth rings meets the oil return slot.

- 6) Check if the rotor can be turned by hand.

Frame	Thrust bearing	Line bearing
1	7306 BECB (J),(M)	NU 207
2	7309 BECB (J),(M)	NU 309
3	7311 BECB (J),(M)	NU 311
4	7313 BECB (J),(M)	NU 313
5	7315 BECB (J),(M)	NU 315
6	7317 BECB (J),(M)	NU 317

7.0 AUXILIARIES

7.1 Seal and seal systems

7.2 Seal and seal systems

7.1.1 Single Mechanical Seal with API – Plan 23

Note: Refer to mechanical seal drawing and auxiliary piping drawing. The pump is equipped with a single mechanical seal. The cartridge design allows to change the mechanical seal without taking it apart.

CAUTION Try to turn the rotor by hand. If the rotor cannot be turned, the pump must be disassembled, refer to section 6.7.1 *Dismantling ERPn*.

Actions after start up:
Check all connections to the seal gland and the mechanical seal itself against leakage. It is usual that at the seal faces a small leakage occurs after start up, which decreases with the time of operation and should stop after the seal is run in. Check the temperature of the seal gland. A slight increase of temperature may be observed during the run in period. The mechanical seal is flushed by an API Plan 23 and the temperature at the seal gland should be below the pumped liquid temperature (refer to mechanical seal drawing for temperature limit).

Plan 23 is the plan of choice for all hot water services, and it is also desirable in many hydrocarbon and chemical services where it is necessary to cool the fluid establish the required margin between fluid vapour pressure (at the seal chamber temperature) and seal chamber pressure. In a Plan 23, the cooler only removes seal face-generated heat plus heat soak from the process.

CAUTION For cooling flow and pressure refer to GA-drawing.

CAUTION Disassembly of the seal cartridge is only allowed by authorized personal. Contact Flowserve for any service of the mechanical seal. We recommend to have a spare cartridge seal on stock for easy replacement.

7.1.2 Dual Mechanical Seal unpressurized with API-Plan 11+52+61

Note: Refer to mechanical seal drawing and auxiliary piping drawing.

The pump is equipped with a dual mechanical seal. The cartridge design allows to change the mechanical seal without taking it apart.

CAUTION Try to turn the rotor by hand. If the rotor cannot be turned, the pump must be disassembled, refer to section 6.7.1 *Dismantling ERPn*.

The mechanical seal requires no adjustment anymore. Check if the mounting plates are already swung out.

Actions after start up:
Check all connections to the seal gland and the mechanical seal itself against leakage. Check the temperature of the seal gland. A slight increase of temperature may be observed during the run in period.

The faces of the inner mechanical seal are flushed by the product (API Plan 11). In Plan 11, product is routed from the pump discharge via an orifice to the seal chamber to provide cooling for the seal and to vent air or vapors from the seal chamber. Fluid then flows from the seal cavity back into the process stream. Between the inner mechanical seal and the outer (atmospheric) mechanical seal is a liquid buffer fluid, which is unpressurized (API Plan 52). The buffer fluid is contained in a seal pot (refer to drawing of the seal pot), which is vented to a vent system, thus maintaining the buffer fluid pressure close to atmospheric.

Inner seal leakage will be product leakage into the buffer fluid. There will always be some leakage (max. 5 ml/hour).

Plan 52 is used for flashing liquids, which have a vapour pressure higher than the buffer fluid pressure. So the product will flash in the seal pot and the vapour can escape to the vent system.

All screw / flange connections have to be proofed. Straight screw joints made of stainless steel have to be tightened especially carefully.

CAUTION Fill the seal system with a suitable buffer fluid (refer to lubrication table).

CAUTION Ensure that the valve GV for the connection V is open (Barrier/buffer fluid vessel drawing).


CAUTION Open the Block & Bleed valve to allow proper function of the PSH (set point 0.5 bar (7.25 psi) above flare pressure).

CAUTION Open all necessary valves in the cooling and auxiliary piping and check the flow.

API Plan 61 has tapped and plugged connections for the purchaser's use. Typically this plan is used when the purchaser is to provide fluid (such as steam, gas, or water) to an external sealing device.




Refer to the GA - drawing for the required quench medium, pressure and flow.



Disassembly of the seal cartridge is only allowed by authorized personal. Contact Flowserve for any service of the mechanical seal. We recommend to have a spare cartridge seal on stock for easy replacement.

7.1.3 Dual Mechanical Seal unpressurized with API-Plan 11+72+76




Refer to mechanical seal drawing and auxiliary piping drawing. The pump is equipped with a dual mechanical seal. The cartridge design allows to change the mechanical seal without taking it apart.

The seal cartridge consists of a contacting wet inner seal and a dry containment seal. A buffer gas is used to sweep inner seal leakage away from the outer seal into a collection system and/or provide dilution of the leakage, so that emissions from the containment seal are reduced.

The plan 72 system is intended to function as follows: The barrier gas first flows through an isolation block valve and check valve provided by the purchaser. It then enters a system, usually mounted on a plate or panel, provided by the seal vendor. An inlet block valve on the panel is followed by a 10 µm (0.0004 in.) filter coalescer (if specified) to remove any particles and liquid that might be present. The gas then flows through a back pressure regulator (if specified) which is set at least 0.5 bar (7 psi) above atmospheric pressure. Next comes an orifice to provide flow regulation followed by a flow indicator to measure flow. The pressure indicator is used to ensure the pressure is not above the seal chamber pressure. The last elements on the panel are a check valve and block valve. Buffer gas is then routed to the seal using tubing. A containment seal vent (CSV) and drain (CSD) are also located on the gland.

The inner mechanical seal is flushed by an API Plan 11.



Try to turn the rotor by hand. If the rotor cannot be turned, the pump must be disassembled, refer to section 6.7.1 *Dismantling ERP N*.


Actions after start up:

Check all connections to the seal gland and the mechanical seal itself against leakage. It is usual that at the seal faces a small leakage occurs after start up, which decreases with the time of operation and should stop after the seal is run in. Check the temperature of the seal gland. A slight increase of temperature may be observed during the run in period. The mechanical seal is flushed by an API Plan 11 and the temperature at the seal gland should be max. 10 °C (18 °F) above the pumped liquid temperature, unless otherwise specified by mechanical seal supplier.

In Plan 11, product is routed from the pump discharge via an orifice to the seal chamber to provide cooling for the seal and to vent air or vapors from the seal chamber. Fluid then flows from the seal cavity back into the process stream.

Plan 76 is suitable only for fluids, where no condensation of the inner seal leakage or from the collection system will occur.

Leakage from the inner mechanical seal is restricted from escape by the containment seal and goes out the containment seal vent. An orifice in the outlet line of the collector restricts flow such that high leakage of the inner seal will cause a pressure increase and trigger the PSH set at a gauge pressure of 0.7 bar (10 psi). The block valve in the outlet serves to isolate the system for maintenance. It may also be used to test the inner seal by closing while the pump is in operation and noting the time/pressure buildup relationship in the collector. If specified, drain connection on the piping harness may be used to inject nitrogen or other gas for the purpose of testing the containment seal as well as for checking for any liquid buildup.



Disassembly of the seal cartridge is only allowed by authorized personal. Contact Flowserve for any service of the mechanical seal. We recommend to have a spare cartridge seal on stock for easy replacement.

7.2.4 API Plan M

Note:


Refer to auxiliary piping drawing.

The pump is equipped with an API plan M, cooling to seal heat exchanger.

Open all the valves in the cooling line before start up the pump.



Check cooling flow at the installed flow indicator. If required adjust flowrate with the flow control valve.



Refer to the GA - drawing for the required cooling flow and pressure.

7.3 Changing of mechanical seal

- 1) Completely drain the pump by using the drain connection. By pumping explosive or toxic media, flush the system with Nitrogen.
- 2) Secure the mechanical seal by putting the mounting plates into the groove of the shaft sleeve. Loose the grub screws, and disconnect the seal piping.



Drain the seal system, if applicable.

- 3) For disassembly refer to section 6.7.1, *Dismantling of pump*.
- 4) For assembly refer to section 6.9.1, *Assembly of pump*

8.0 FAULTS; CAUSES AND REMEDIES

FAULT SYMPTOM

Pump overheats and seizes												
↓	Bearings have short life											
	↓	Pump vibrates or is noisy										
		↓	Mechanical seal has short life									
			↓	Mechanical seal leaks excessively								
				↓	Pump requires excessive power							
					↓	Pump loses prime after starting						
						↓	Insufficient pressure developed					
							↓	Insufficient capacity delivered				
								↓	Pump does not deliver liquid			
									↓	PROBABLE CAUSES		POSSIBLE REMEDIES
										A. SYSTEM TROUBLES		
●										●	Pump not primed.	Check complete filling
	●			●		●				●	Pump or suction pipe not completely filled with liquid.	Check and complete filling
●	●				●		●			●	Suction lift too high or level too low.	Check NPSHa>NPSHr, proper submergence, losses at strainers / fittings
					●	●	●				Excessive amount of air or gas in liquid.	Check and purge from pipes
					●		●	●			Air or vapour pocket in suction line.	Check suction line design for pockets
					●		●				Air leaks into suction line.	Check airtight pipe then joints and gaskets
					●		●				Air leaks into pump through mechanical seal, sleeve joints, casing joint or pipe lugs.	Check airtight assembly then joints and gaskets
	●						●				Foot valve too small.	Investigate replacing the foot valve
	●						●				Foot valve partially clogged.	Clean foot valve
	●				●		●	●			Inlet of suction pipe insufficiently submerged.	Check cut out system design
						●	●	●			Total head of system higher than differential head of pump.	Check discharge head and head losses in discharge pipe at the valve settings. Check back pressure is not too high
				●							Total head of system lower than pump design head.	Throttle at discharge valve or ask Flowserve if the impeller can be trimmed
				●							Specific gravity of liquid different from design.	Consult Flowserve
				●	●	●					Viscosity of liquid differs from that for which designed.	Consult Flowserve
●	●										Operation at very low capacity.	Measure value and check minimum permitted
	●	●			●						Operation at high capacity.	Measure value and check maximum permitted
											B. MECHANICAL TROUBLES	
●	●	●	●	●	●						Misalignment due to pipe strain.	Check the flange connections and eliminate strains using elastic couplings or a method permitted
		●									Improperly designed foundation.	Check setting of baseplate: tighten, adjust, grout base as required
	●	●	●	●	●						Shaft bent.	Check shaft runouts within acceptable values
●	●	●			●						Rotating part rubbing on stationary part internally.	Check for signs of this and consult Flowserve if necessary
●	●	●	●	●							Bearings worn	Replace bearings
					●		●	●			Wearing ring surfaces worn.	Replace worn wear ring/ surfaces
		●					●	●			Impeller damaged or eroded.	Replace impeller and check reason
				●							Leakage under sleeve due to joint failure.	Replace joint and check for damage
		●	●	●							Mechanical seal improperly installed.	Check alignment of faces or damaged parts and assembly method used

FAULT SYMPTOM

Pump overheats and seizes															
↓	Bearings have short life														
	↓	Pump vibrates or is noisy													
		↓	Mechanical seal has short life												
			↓	Mechanical seal leaks excessively											
				↓	Pump requires excessive power										
					↓	Pump loses prime after starting									
						↓	Insufficient pressure developed								
							↓	Insufficient capacity delivered							
								↓	Pump does not deliver liquid						
									↓	PROBABLE CAUSES				POSSIBLE REMEDIES	
				●	●	●							Incorrect type of mechanical seal for operating conditions.	Consult Flowserve	
●	●	●	●	●									Shaft running off center because of worn bearings or misalignment.	Check misalignment and correct if necessary. If alignment satisfactory check bearings for excessive wear	
●	●	●	●	●									Impeller out of balance resulting in vibration.	Check and consult Flowserve	
			●	●	●								Abrasive solids in liquid pumped.	Check and consult Flowserve	
			●	●									Mechanical seal was run dry.	Check mechanical seal condition and source of dry running and repair	
			●	●									Internal misalignment due to improper repairs causing impeller to rub.	Check method of assembly, possible damage or state of cleanliness during assembly	
●	●	●											Excessive thrust caused by a mechanical failure inside the pump.	Check wear condition of Impeller, its clearances and liquid passages	
	●	●											Excessive grease in ball bearings.	Check method of regreasing	
	●	●											Lack of lubrication for bearings.	Check hours run since last change of lubricant, the schedule and its basis	
	●	●											Improper installation of bearings	Check method of assembly, possible damage or state of cleanliness during assembly and type of bearing used	
	●	●											Damaged bearings due to contamination.	Check contamination source and replace damaged bearings	
													C. ELECTRICAL TROUBLES		
		●		●	●	●							Wrong direction of rotation.	Reverse 2 phases on motor terminal box	
	●	●									●		Motor running too slow,	Check motor terminal box connections	

9.0 CERTIFICATION

Certificates determined from the contract requirements are provided with these instructions where applicable. Examples are certificates for CE marking, ATEX marking etc. If required, copies of other certificates sent separately to the Purchaser should be obtained from the Purchaser for retention with these User Instructions.

10.0 OTHER RELEVANT DOCUMENTATION AND MANUALS

10.1 Supplementary user instructions

Supplementary instructions determined from the contract requirements for inclusion into user Instructions such as for a driver, instrumentation, controller, sub-driver, seals, sealant system, mounting component etc are included in the Data Book. If further copies of these are required they should be obtained from the supplier for retention with these user instructions.

Where any pre-printed set of user instructions are used, and satisfactory quality can be maintained only by avoiding copying these, they are included at the end of these user instructions such as within a standard clear polymer software protection envelope.

10.2 Change notes

If any changes, agreed with Flowserve, are made to the product after its supply, a record of the details should be maintained with these User Instructions.

10.3 Additional sources of information

Reference 1:

NPSH for Rotordynamic Pumps: a reference guide, Europump Guide No. 1, Europump & World Pumps, Elsevier Science, United Kingdom, 1999.

Reference 2:

Pump Handbook, 2nd edition, Igor J. Karassik et al, McGraw-Hill Inc., New York, 1993.

Reference 3:

ANSI/HI 1.1-1.5
Centrifugal Pumps - Nomenclature, Definitions, Application and Operation.

Reference 4:

ANSI B31.3 - Process Piping.

10.4 Abbreviations

Quantity	ISO unit	ISO unit abbreviation	Multiplication Factor ¹	US unit	US unit Abbreviation
Area	square meter square centimeter	m ² cm ²	10.764 0.155	square feet square inch	ft ² in. ²
Capacity or Flow rate	Cubic meter/hour	m ³ /h	4.4033	US Gallons/minute	US gpm
Force	Newton	N	0.2248	Pound force	lbf
Head	meter	m	3.28084	feet	ft
Heat Energy	kilo joule	kJ	0.9478	British thermal unit	Btu
Length	meter millimeter micrometer	m mm µm	3.28084 0.03937 0.00003937	feet inch inch	ft in. in.
Mass	kilogram gram	kg g	2.20462 0.035274	pounds ounces	lb. oz.
Moment of Inertia	kilogram square meter	kg.m ²	23.73	pounds square feet	lb.ft ²
Noise ⁴	decibel	dBA			
Power	kilowatt	kW	1.34102	horsepower	hp
Pressure ²	bar	bar	14.5	pounds/in. ²	psi
Rotational Speed	revs per minute	r/min			
Stress	Newton/square millimetre	N/mm ²	145.0	pounds/in. ²	psi
Temperature	degrees Celsius	°C	(1.8 x °C) + 32	degrees Fahrenheit	°F
Torque	Newton meter	Nm	0.7376	pound.feet	lbf.ft
Unbalance	gram millimeter	g.mm	0.001389	ounce-inch	oz-in.
Vibration ³	millimetre/second	mm/s	0.03937	inches/second	in./sec
Velocity	meter/second millimeter/second	m/s mm/s	3.28084 0.03937	feet/second inches/second	ft/sec in./sec
Viscosity	square millimetre/second or centiStoke	cSt			
Volume	cubic meter liter	m ³ l	264.2 33.81	US Gallons fluid ounce	US gal. Fl.oz.

¹ multiply the ISO unit by the multiplication factor to obtain US units

² where pressure is not stated to be absolute it is gauge

³ where not stated to be peak it is r.m.s.

⁴ sound pressure level LpA, re 1m - 20microPa, or sound power level LwA re 1 pW when sound power is applicable

AFTERMARKET DIRECTORY

OUR ADDRESS

Flowserve (Austria) GmbH
Industriestraße B/6
A-2345 Brunn/Geb., AUSTRIA

Tel: +43 / 2236 / 31530
Fax: +43 / 2236 / 33430
Mail: flowserve-brunn@flowserve.com

MESSAGES CAN BE LEFT ALSO ON OUR ANSWERING MACHINE

IMPORTANT NOTES:

PLEASE NOTE, THAT WARRANTY EXPIRES:

- USE OF NON GENUINE FLOWSERVE AUSTRIA PARTS FOR MAINTENANCE AND REPAIRS
- NO USE OF OUR SERVICE PERSONAL IN CASE OF REPAIRS DURING WARRANTY PERIOD

RECOMMENDATION:

- PLEASE ASK FOR OUR SPECIAL RATES
- PLEASE ALSO ASK OUR SERVICE PERSONAL ABOUT REPAIRING AND SERVICING YOUR PUMPS AFTER THE WARRANTY PERIOD

Please quote your service:

Name of Company:
Contact person:.....
Telephone:
Fax:
e-mail:
Country:

Pumpdata:
Type:
Serialno.:

Your Flowserve factory contacts:

Flowserve (Austria) GmbH
Industriestraße B6
2345 Brunn am Gebirge
Austria

Telefon: +43 2236 31530
Fax: +43 2236 33430
E.mail: flowserve-brunn@flowserve.com

**FLOWSERVE REGIONAL
SALES OFFICES:****USA and Canada**

Flowserve Corporation
5215 North O'Connor Blvd.
Suite 2300
Irving, Texas 75039-5421, USA
Telephone: +1 937 890 5839

Europe, Middle East, Africa

Flowserve Corporation
Parallelweg 13
4878 AH Etten-Leur
The Netherlands
Telephone: +31 76 502 8100

Latin America

Flowserve Corporation
Martín Rodríguez 4460
B1644CGN-Victoria-San
Fernando
Buenos Aires, Argentina
Telephone: +54 11 4006 8700
Telefax: +54 11 4714 1610

Asia Pacific

Flowserve Pte. Ltd.
10 Tuas Loop
Singapore 637345
Telephone: +65 6771 0600
Telefax: +65 6862 2329